

### RTC-700B

Rugged Tablet Computer

User's Manual 1st Ed

#### **Copyright Notice**

This document is copyrighted, 2016. All rights are reserved. The original manufacturer reserves the right to make improvements to the products described in this manual at any time without notice.

No part of this manual may be reproduced, copied, translated, or transmitted in any form or by any means without the prior written permission of the original manufacturer. Information provided in this manual is intended to be accurate and reliable. However, the original manufacturer assumes no responsibility for its use, or for any infringements upon the rights of third parties that may result from its use.

The material in this document is for product information only and is subject to change without notice. While reasonable efforts have been made in the preparation of this document to assure its accuracy, AAEON assumes no liabilities resulting from errors or omissions in this document, or from the use of the information contained herein.

AAEON reserves the right to make changes in the product design without notice to its

users.

#### Acknowledgement

All other products' name or trademarks are properties of their respective owners.

- Intel® Atom is registered trademarks of Intel® Corporation
- Microsoft® Windows is a registered trademark of Microsoft® Corporation.

All other product names or trademarks are properties of their respective owners.

#### Packing List

Before setting up your product, please make sure the following items have been shipped:

Item		Quantity
•	RTC-700B with Windows 10	1
•	AC/DC power adapter	1
٠	Product DVD with User's Manual (in pdf)	1

If any of these items are missing or damaged, please contact your distributor or sales representative immediately.

This User's Manual contains all the essential information, such as detailed descriptions and explanations on the product's hardware and software features (if any), its specifications, dimensions, jumper/connector settings/definitions, and driver installation instructions (if any), to facilitate users in setting up their product.

Users may refer to the AAEON.com for the latest version of this document.

# RTC-700B

#### Safety Precautions

Please read the following safety instructions carefully. It is advised that you keep this manual for future references

- 1. All cautions and warnings on the device should be noted.
- 2. Make sure the power source matches the power rating of the device.
- Position the power cord so that people cannot step on it. Do not place anything over the power cord.
- Always completely disconnect the power before working on the system's hardware.
- No connections should be made when the system is powered as a sudden rush of power may damage sensitive electronic components.
- If the device is not to be used for a long time, disconnect it from the power supply to avoid damage by transient over-voltage.
- 7. Always disconnect this device from any AC supply before cleaning.
- 8. While cleaning, use a damp cloth instead of liquid or spray detergents.
- 9. Make sure the device is installed near a power outlet and is easily accessible.
- 10. Keep this device away from humidity.
- 11. Place the device on a solid surface during installation to prevent falls
- 12. Do not cover the openings on the device to ensure optimal heat dissipation.
- 13. Watch out for high temperatures when the system is running.
- 14. Do not touch the heat sink or heat spreader when the system is running
- 15. Never pour any liquid into the openings. This could cause fire or electric shock.
- 16. As most electronic components are sensitive to static electrical charge, be sure to ground yourself to prevent static charge when installing the internal components. Use a grounding wrist strap and contain all electronic components in any static-shielded containers.

- 17. If any of the following situations arises, please the contact our service personnel:
  - i. Damaged power cord or plug
  - ii. Liquid intrusion to the device
  - iii. Exposure to moisture
  - iv. Device is not working as expected or in a manner as described in this manual
  - v. The device is dropped or damaged
  - vi. Any obvious signs of damage displayed on the device

### DO NOT LEAVE THIS DEVICE IN AN UNCONTROLLED ENVIRONMENT WITH TEMPERATURES BEYOND THE DEVICE'S PERMITTED STORAGE TEMPERATURES (SEE CHAPTER 1) TO PREVENT DAMAGE.

#### FCC Statement



This device complies with Part 15 FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received including interference that may cause undesired operation.

#### Caution:

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions and your local government's recycling or disposal directives.

#### Attention:

Il y a un risque d'explosion si la batterie est remplacée de façon incorrecte. Ne la remplacer qu'avec le même modèle ou équivalent recommandé par le constructeur. Recycler les batteries usées en accord avec les instructions du fabricant et les directives gouvernementales de recyclage.

#### China RoHS Requirements (CN)

产品中有毒有害物质或元素名称及含量

AAEON Panel PC/ Workstation

	有毒有害物质或元素					
部件名称	铅	汞	镉	六价铬	多溴联苯	多溴二苯醚
	(Pb)	(Hg)	(Cd)	(Cr(VI))	(PBB)	(PBDE)
印刷电路板	0	0	0	0	0	0
及其电子组件	0	0	0	0	0	0
外部信号	0	0	0	0	0	0
连接器及线材	0	0	0	0	0	U
外壳	0	0	0	0	0	0
中央处理器	0	0	0	0	0	ο
与内存	0	0	0	0	0	U
硬盘	0	0	0	0	0	0
液晶模块	0	0	0	0	0	0
光驱	0	0	0	0	0	0
触控模块	0	0	0	0	0	0
电源	0	0	0	0	0	0
<ul> <li>O:表示该有毒有害物质在该部件所有均质材料中的含量均在</li> <li>SJ/T 11363-2006 标准规定的限量要求以下。</li> <li>X:表示该有毒有害物质至少在该部件的某一均质材料中的含量超出</li> </ul>						

SJ/T 11363-2006 标准规定的限量要求。

备注:

一、此产品所标示之环保使用期限,系指在一般正常使用状况下。 二、上述部件物质中央处理器、内存、硬盘、光驱、触控模块为选购品。

RTC-700B

Preface

www.texim-europe.com

#### China RoHS Requirement (EN)

Poisonous or Hazardous Substances or Elements in Products

AAEON Panel PC/ Workstation

Poisonous or Hazardous Substances or Elemen			nts			
Component	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr(VI))	Polybrominated Biphenyls (PBB)	Polybrominated Diphenyl Ethers (PBDE)
PCB & Other Components	0	0	0	0	0	0
Wires & Connectors for External Connections	0	0	0	0	0	0
Chassis	0	0	0	0	0	0
CPU & RAM	0	0	0	0	0	0
Hard Disk	0	0	0	0	0	0
LCD	0	0	0	0	0	0
Optical Drive	0	0	0	0	0	0
Touchscreen	0	0	0	0	0	0
PSU	0	0	0	0	0	0

O: The quantity of poisonous or hazardous substances or elements found in each of the component's parts is below the SJ/T 11363-2006-stipulated requirement.

X: The quantity of poisonous or hazardous substances or elements found in at least one of the component's parts is beyond the SJ/T 11363-2006-stipulated requirement.

Note: The Environment Friendly Use Period as labeled on this product is applicable under normal usage only

#### Table of Contents

Chapter	1 - Produc	t Specifications	1		
1.1	Specifi	cations	2		
Chapter	Chapter 2 – Getting Started5				
2.1	Produc	ct Overview	6		
2.2	Notes	Before Use			
2.3	Turning	g On the Device	13		
2.4	Touch	Controls	14		
Chapter	3 – Setting	J Up	15		
3.1	Setting	gs Screen	16		
	3.1.1	System	19		
	3.1.2	Device	22		
	3.1.3	Network & Internet	23		
	3.1.4	Personalization Settings	25		
	3.1.5	Accounts Settings			
	3.1.6	Time & Language Settings	27		
	3.1.7	Ease of Access Settings			
	3.1.8	Privacy Settings	29		
	3.1.9	Update & Security			
Chapter	4 – Option	al Accessories	31		
4.1	1D/2D	) Code Scanner			
4.2	4.2 Magnetic Stripe Reader (MSR)				
4.3	Smart Card Reader (SCR)				
4.4	4.4 Docking Station				
	4.4.1	Specifications			
Chapter	Chapter 5 – Drivers Installation				
5.1	Produc	ct CD/DVD			

Appendix A	A - Statements	41
A.1	Statements	42
A.2	Canadian Notice	
A.3	Safety Caution	45
A.4	Battery Disposal	47
A.5	Battery Caution	
A.6	Adapter Caution	50
A.7	FCC Interference Statement	

## Chapter 1

Product Specifications

www.texim-europe.com

#### 1.1 Specifications

Syst	em	
•	Processor	Intel® AtomTM x5-Z8350 Quad-Core up to 1.92 GHz
•	System Memory	DDR3L-RS 1600 2GB
•	LCD Display	7" (1280 x 800) TFT LCD with 10-point P-cap Anti-Scratch Screen
•	Communication	WiFi a/b/g/n Bluetooth 3.0 (EDR) with integrated class 1 PA and BLE Support
•	I/O Port	Mini USB x 1 USB Type A x 1 USB Type C x 1
•		3.5 mm Stereo Headphone Jack x 1 DC-In Jack x 1 Built-In Speaker & Microphone 10-pin Cradle Pin SIM Card Slot Micro SD card slot
•	Storage	64 GB eMMC Flash
•	Navigation	GPS/ Glonass/ AGPS (when 3G is enabled) E-Compass
•	Camera	2MP Front Camera,8MP Rear Camera
•	Sensor	Built-in Light Sensor

Built-in G-Sensor

Built-in 3-axis Digital Gyroscope

Built-in Vibration Motor

os os

Window 10

Mechanical			
•	Color	Black	
•	Dimension (W x H x D)	136.6 x 219 x 21 mm (5.38 x 8.58 x 0.83")	
•	Gross Weight	0.57 Kg (1.25 lb)	
•	Carton Dimension	245 x 158 x 82 mm (96.5 x 62.2 x 32.3")	

Environmental		
Operating Temperature	-20°C ~ 50°C (-4 ~ 122°F)	
• Storage Temperature	-55°C ~ 75°C (-67 ~ 167°F)	
• Operating Humidity	10 ~ 75%	
Water/ Dust Protection	IP65	
Rating		
Vibration	Met MIL-STD-810G-514.6 Procedure I Cat.24,	
	Fig 514.6E-1 & 514.6E-2 (Unit is non-operating)	
	ASTM 4169-99 Truck Assurance Level II,	
	Schedule E (Unit is non-operating)	
• Drop	26 drops from 150 cm height to 2" plywood over	
	concrete with bumpers & unit off	
	2 units to pass	

Chapter 1 – Product Specifications <u>www.texim-europe.com</u>

RTC-70

		MIL-STD-810G-516.6, Procedure IV
•	ESD	Air +/- 8KV, Contact +/- 4KV

EMI/ Safety CE/ FCC Class B/ UL

Power Supply	
AC/DC Adapter	AC Power Input: 100 ~ 240 V, 50 ~ 60 Hz, 36 W
	output: 12 V, 3 A
Battery	Lithium-Polymer High Capacity Battery
	swappable, 6 hrs
	1) Master BAT/Hard pack: 7.4V 1530 mAh
	2) Slave BAT/Soft pack:7.4V 1530 mAh

LCD		
•	Display Type	7" TFT LCD Module with LED Backlight
•	Max. Resolution	1280 x 800
•	Max. Colors	16.7 M
•	Dot Size (H x W)	0.117x 0.117
•	Luminance (cd/m <sup>2</sup> )	400 nit
•	Viewing Angle	Horizontal: 178°
		Vertical: 178°

## Chapter 2

Getting Started

www.texim-europe.com

#### 2.1 Product Overview

#### Front View



#### Side View (Left)



Part	Function	
	You may connect a USB type A device (ie USB flash drive)	
USB Type A	or extension cable directly to the tablet.	
COM/ Ethernet Port	A module with a RS-232 and RJ-45 port.	
(Optional)		
SIM Card Slot	Usable with standard-size SIM cards only.	
Cradle Interface	For interaction with the tablet's docking station.	
3.5 mm Audio Jack	Usable with any audio device with a 3.5 mm jack.	

#### Side view (Right)



Part	Function
USB Type C	Usable with a USB Type C cable
DC-in Jack	Connect the DC power cable to this jack.
Mini USB	Usable with a Micro USB cable.
Power Button	Turns the tablet on/off. If the system is unresponsive, press
Power Button	and hold the button to forced power off.
Micro-SD Card Slot	A micro-SD card (or adapter) can be inserted here.

Micro SD Slot

Power Button

Front Camera

Ext.GPS ANT

**Rear View** 



Part	Function
Scanner Trigger/ Multi	Turns scanners on/off
Function Button	
Battery Bay	Battery bay for battery 2 (battery 1 is built-in)

#### With Barcode Scanner



#### Standard



#### 2.2 Notes Before Use

Before using your device, please read through the following instructions

- Use only the power adapter that comes with your device. Using a different power adapter may cause damage.
- The AC cable is designed for the RTC-700B only
- This product is intended to be supplied by a Listed Power Adapter or DC power source, rated 12Vdc, 3A minimum, Tma = 40°C. Please contact AAEON for further assistance.
- Using a power outlet is the best way to charge your device (refer to section 1.2 for the adapter's voltage output and acceptable input)
- When using the device for the first time, fully charge the battery for up to 8 hours. If the device is inactive, charging the battery once per month is recommended to prevent deterioration.
- There are two batteries in the **RTC-700B**: Battery 1 is internal while battery 2 is swappable by the user (both batteries can be monitored at the title bar). Charge the device once battery 1 drops below 20%
- Always allow your battery to be fully charged before use. Calibrating the battery before use is also highly recommended.
- To prolong battery life, allow a fully charged battery to discharge more than 95% before recharging
- Ensure that the battery cover is properly secured by manually pushing the pin to lock position.
- The RTC-700B CANNOT be charged via an USB connection.
- The IP65 waterproof protection may get damaged when subjected to shocks greater than levels tested in MIL-STD-810G Method 516.6 Procedure IV. The protection may also be affected if the rubber connector fails to cover or close firmly.

 Draw current must not exceed 150mA per USB port is populated on tablet.

Chapter 2 – Getting Started www.texim-europe.com

#### 2.3 Turning On the Device



- The power button turns your device on and off. Hold the button for three seconds to power on.
- To start or wake it up from sleep mode, hold the power button for 0.5 seconds till the shutdown confirmation is shown. If the system remains unresponsive, press and hold the power button to force power off (may result in data loss). It is strongly recommended that important data is backed up on a regular basis.

#### 2.4 Touch Controls

Gusture	Action
Single Taps	Single taps allow users to open any files or applications or
	select text input area
	Long tapping an icon allows it to be moved freely on the
Long Tap	screen. This gesture also opens the Android context menu,
(Tap and Hold)	letting you cut, copy, rename, delete the selected file, or
	select multiple files for batch actions

### Chapter 3

Setting Up

www.texim-europe.com

#### 3.1 Settings Screen

The Settings screen allows you to configure some settings of your RTC-700B which includes:

Main Category	Sub Category
	Display
Curtoro .	Notifications
System	Apps
	Power
	Bluetooth
Device	Printers
	Mouse
	Wi-Fi
Networks & Internet	Airplane Mode
	VPN
	Background
Personalization	Lock Screen
	Colors
	Your Account
Accounts	Sync Settings
Accounts	Work
	Family
	Speech
Time & Language	Region
	Date
Ease of Access	Narrator
	Magnifier

	High Contrast
	Location
Privacy	Camera
	Windows Update
Update & Security	Recovery
	Backup

#### From Home Screen



#### 1. Reveal the Charm Bar.



#### 2. Tap Settings



Chapter 3 – Setting Up

#### 3.1.1 System

#### Configuring the Display.

#### 1. Go to Setting>Systems>Display.

4 Settings			1	×
SYSTEM	Find a setti	50		2
Display	Identify Detect Connect to a wireless display			
Notifications & actions	Change the size of text, apps, and other items: 100% (Recommended)	6		
Apps & features	Orientation			
Multitasking	Tantiticape			
Tablet mode	Lock rotation of this display			
Battery saver	Off     Brightness level			
Power & sleep	anginines level			
Storage	Adjust my screen brightness automatically			
Offline maps	Addir			
Default apps	Advanced display settings			
About	and a subject and a subject of a			

#### •Font Size:

Adjust the font size here.

#### •Display Rotation:

You may lock rotation of this display Off or On.

#### •Brightness:

You may allow the device to "Adjust my screen brightness automatically" On or Off.

1. Go to Settings>Systems.

#### 2. Select Notifications & actions.

€- Settings		-	٥	$\times$
💮 SYSTEM		Find a setting		P
Display	Quick actions			
Notifications & actions Apps & features	Choose your quick actions			
Multitasking				
Tablet mode	Select which icons appear on the taskbar			
Battery saver	Turn system icons on or off			
Power & sleep	Notifications			
Storage	Show app notifications On			
Offline maps Default apps	Show notifications on the lock screen			
About	Show alarms, reminders and incoming VOIP calls on the lock screen			
	On Hide notifications while presenting			
	on Of			
<b>#</b> 2 @ 🔽	Charles and the state	^ D % B ⊟	3 <u>299</u>	PM 2016

#### •APP:

You may show app notifications On or Off.

#### •Lock Screen:

You may show notifications on the lock screen On or Off.

#### •Alarms, Reminders, Incoming VOIP calls:

You may show alarms, reminders and incoming VOIP calls

on the lock screen On or Off.

#### Configuring Apps & Features

1. Go to Settings>Systems> Apps & features.

€- Settings			-	o ×
SYSTEM		Find a setting		P
Display	Apps & features			
Notifications & actions	Manage optional features			
Apps & features	Search, sort, and filter by drive. If you would like to uninstall or move an app, select it from the list.			
Multitasking	Type an app name			
Tablet mode	15 Sort by size			
Battery saver	Show apps on all drives			
Power & sleep	Intel(R) Processor Graphics 74.2 MB Intel Corporation 4/8/2016			
Storage	NXPProximityInstaller 9.52 MB NXR Commonductors 4/0/2016			
Offline maps	NOP Semiconductors 4/8/2016			
Default apps	Quectel USB Drivers For UC208UCI58EC20 8.81 MB Quectel Wireless, Co.,Ltd. 4/8/2016			
About	u-center v0.12 Unavailable u-biox 4/13/2016			
	Windows Driver Package - u-blox AG (ublox Unavailable u-blox AG 4/13/2016			
n 2 a 🔽			^ 🛛 📼	1041 AM

2. You may view the amount of the space used by each app.

#### Configuring Power & Sleep

#### 1. Go to Settings>Systems.

€ Settings	- a ×	
SYSTEM	Find a setting P	]
Display	Screen	
Notifications & actions	On battery power, turn off after	
Apps & features	4 minutes V	
Multitasking	When plugged in, turn off after	
Tablet mode	Never ~	
Battery saver	Sleep	
Power & sleep	On battery power, PC goes to sleep after	
Storage	4 minutes V	
Offline maps	When plugged in, PC goes to sleep after	
Default apps	Never ~	
About	Wi-Fi	
	On battery power, stay connected to Wi-Fi while asleep	
	Vhen plugged in, stay connected to Wi-Fi while askep	
# P © 0	∧ ■ 1 18 000 450 900 667 0000	6

- 2. Select Power & Sleep.
- 3. Set up the idle time before the device goes to sleep mode.

#### 3.1.2 Device

#### Adding Printers & Scanners

#### 1. Go to Settings>Devices.

← Settings		Find a setting	2	-	ø	×
Connected devices Burtooth Moore R burghed Typing Antalhay	Add printers & scanners					
a の 🖸		^	∞ ½ 5		5.06 6/21/	PM 1016

- 2. Select Printers & Scanners.
- 3. You may add a printer or scanner.

#### Pairing Bluetooth devices

#### 1. Go to Settings>Devices.

← Settings		- σ ×
DEVICES		Find a setting ,P
Printers & scanners	Manage Bluetooth devices	
Connected devices	Bluetooth	
Bluetooth	Your PC is searching for and can be discovered by Bluetooth	
Mouse & touchpad	devices.	
Typing	Bluetooth Notebook Mouse 5000 Paired	
AutoPlay	AUGUSLIANG-NB Ready to pair	
	KIMO-L823-0723 Ready to pair	
	AA-LA11-2154 Ready to pair	
	Ready to pair	
	PC000758 Ready to pair	
	Uriknown Ready to pair	
	Related settings	
# P 🚥 🚺		∧ 💈 📼 🐜 🖬 📖 500 PM

- 2. Select **Bluetooth** to turn on the Bluetooth.
- 3. Search and select the device you would like to pair with.

#### 3.1.3 Network & Internet

#### Connecting to a WiFi AP

#### 1. Go to Settings>Network & Internet>Wi-Fi

÷	Settings		-	σ	×
۵	NETWORK & INTERNET		Find a setting		P
WI-FI		Wi-Fi			
Airpla	ne mode	on On			
Cellula Data u		AAEON-Wireless			
	nage e hotspot	103世堂 103世堂			
VPN		AAEON-Wireless-PEAP			
Dial-u	p	A4EONWireless25			
Ethern Praxy	et	AAEON-Wireless2F-1			
		ONYX_ORION_SERVER			
		// RMD_SW_24G			
		TP-LINK TP-LINK			
		Time twoisonic01			
Ŧ	۵ م	3.600	^ <b>m</b> 16 <b>B</b> ⊟	523 6/210	PM 2016

- 3. Select one access point from the list.
- 4. Type in your password and tap Connect

#### Configuring Airplane Mode

1. Go to Setting>Network>Airplane mode.

← Settings		-	0 3	×
NETWORK & INTERNET		Find a setting	3	٥
vi-Fi	Airplane mode			
irplane mode	Turn this on to stop all wireless communication			
ellular	Off Off			
lata usage	Wireless devices			
fobile hotspot	Cellular			
PN	€ Off Wi-Fi			
ial-up	On On			
themet	Bluetooth			
току	C Off			
	On On			
	GPSIGNSS			
	On On			
A C		<ul> <li>□ 1: B</li> </ul>	135 A	4

2. You may turn it on to stop all wireless communication.

#### Configuring VPN

1.	Go to	Settinas>	Network>VPN
<u> </u>	00.00	e e un i ge	

€- Settings			-	0	×
	Add a VPN connection				
	VPN provider				
	Connection name				
	Server name or address				
	Password (optional)				
		Save Cancel			
= P 🛛 🖸			~ • * B B	B4	0 AM

2. You may add a VPN connection. Input VPN


provider/Connection name/Server name or address and

tap Save.

# 3.1.4 Personalization Settings

# Background/Colors/Lock screen

1. Go to Settings>Personalization>Background.

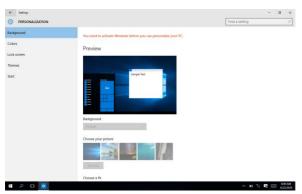

2. You may personalize the background color and / or

lock screen.

# 3.1.5 Accounts Settings

# Configuring Users Accounts

# 1. Go to Settings>Accounts.

€- Settings		- 0	×
		Find a setting	P
Your account	You need to activate Windows before you can personalize your PC.		
Sign-in options			
	Atom		
Work access	Local Account Administrator		
Family & other users			
Sync your settings	Windows is better when your settings and files automatically sync. Use a Microsoft account to easily get all your stuff on all your devices.		
	Sign in with a Microsoft account instead		
	Your picture		
# A 🖸 🚺		^ ю % <b>В</b> ⊟ 🖁	151 AM (22/2016

2. You may manage user accounts and setup the properties for each account here.

# Configuring Date & Time

1. Go to Settings>Time & Language.

€- Settings		- 0 ×
TIME & LANGUAGE		Find a setting
Date & time	Date and time	
Region & language	12:42 PM, Wednesday, June 22, 2016	
Speech	Set time automatically	
	On On	
	Change date and time	
	Churge	
	Time zone	
	UTC+08:00 Talgel	
	• ot	
	Formats	
	First day of week: Sunday	
	Short date: 6/22/2016	
	Long date: Wednesday, June 22, 2016	
	Short time: 12:42 PM	
	Long time: 12:42:07 PM	
	Change date and time formats	

2. You may change the device's date and time, time zone

and time format here.

# Configuring Accessibility

#### 1. Go to Settings>Ease of Access.

←	Settings	- 0 ×
۲	EASE OF ACCESS	Find a setting $P$
Narra	tor	Hear text and controls on the screen
Close Keybo Mous	contrast d captions vard	Tree Inc. A find Control So for the Softeen in Narradre assessment with rankal all the elements on screek, Narradre To To To have narradre of mild a landwaree, tag the Narradre slider, and the control code to bus particles on the screek. Soft Tarten assessments): Soft Tarten assessments: Soft Tarten assessments): Soft Tarten assessments: Soft Tar
		Sounds you hear
Ŧ	<u>ه</u> م	^ E8

2. You may setup system accessibility, including narrator, magnifier, high contrast,

closed captions, keyboard, mouse and other options.

# 3.1.8 Privacy Settings

# Changing Privacy Options


#### 1. Go to Settings>Privacy.

← Settings Ø PRIVACY	Find a set	-	ø	<b>х</b>
Control Contro	Change privacy options Let apoue my scheduling to for operators across apps (tuming this of will reset your 0.) or on Tum on Sinardioxen filter to check web content (URLs) that Viridous Sine approve or on Sense Microsoft Into about how I write to help as ingerove typing and writing in the funce.	ng		~
Cortacts Colenter Messaging Radios Other devices Feedback & diagnostics Background apps	n      n     n     n			
# P 🛛 🚺			9.20 6/22	AM 2016

2. You may change the privacy settings here.

# Windows Updates

#### 1. Go to Settings>Update & Security.

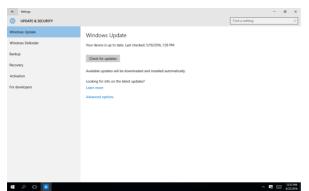

2. You may manage windows update, windows defender, backup, recovery and activation here.

# Chapter 4

Optional Accessories

www.texim-europe.com

# 4.1 1D/2D Code Scanner

The 1D/2D Code Scanner allows user to 1D/2D codes such as barcodes and QR codes. The RTC-700M has a pre-installed app for testing this functionality.

For the purpose of saving battery, you can activate the scanner as and when required via the trigger button and Android. Please follow to steps below to activate the scanner.

You can perform the following test to check if the scanner is working:


- 1. Open notepad
- 2. Scan any barcodes
- 3. If the scanner is working, the code will be scanner and reflected on the notepad.

For detailed specifications and operating instructions, please refer to the bar code scanner manual in the driver disk provide.

## 4.2 Magnetic Stripe Reader (MSR)

The MSR allows user read data off magnetic stripes. A pre-installed app is available for testing this functionality.

- 1. Open Settings>Devices>Connected devices.
- 2. Tap Add a device and searching for devices.

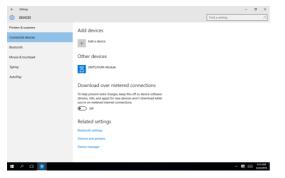


# 4.3 Smart Card Reader (SCR)

Once Smart Card Reader Module (SCR) is installed, which will be

recognized automatically on Device Manager. Then, the module is working good to read smart card content.

1. Open Settings>Devices>Connected devices.

2.Tap"Add a device" and searching for devices.

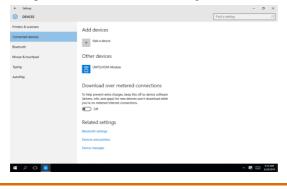

Chapter 4 – Optional Accessories www.texim-europe.com

The docking station provides users with a stable and convenient platform when using their RTC.With more expansion ports, the RTC can be doubled as desktop computer when keyboard and mouse attached.



# 4.4.1 Specifications

Connectors & LED indicators			
• I/O USB 2.0 x 4			
	RJ45 jack for 10/100 Base-TX		
	Ethernet x 1		
	Micro HDMI x 1		
	RS-232 x 1		
DC Input	DC in 12V		
LED Indicator	Power Input Status:		
	Yellow-DC input		
	Blue-RTC connection		
	Ethernet Status:		
	Green-Connected		

Mechanical			
•	Color	Black	
•	Construction	PC	
•	Dimensions(W x H xD)	243 x 227 x 180 mm (9.6 x 8.9 x 7.1")	
•	Gross Weight	830 g (1.83 lb)	

# Environmental

•	Operating Temperature	0°C ~ 40°C (32 ~ 104°F)
•	Storage Temperature	-10°C ~ 50°C (14 ~122°F)
•	ESD	Air +/- 8KV, Contact +/- 4KV

Chapter 4 – Optional Accessories www.texim-europe.com

EMI/ Safety

CE/ FCC Class B/ UL

# Power Supply

AC/DC Adapter

AC Power Input: 100 ~ 240 V, 50 ~ 60 Hz, 36 W output: 12 V, 3 A

# Chapter 5

Drivers Installation

www.texim-europe.com

The RTC-700B series comes with a product DVD that contains all the drivers and utilities you need to setup your product. Insert the DVD and follow the steps in the autorun program to install the drivers.

In case the program does not start, follow the sequence below to install the drivers.

#### Step 1 – Install Chipset Drivers

- 1. Open the step1.chipset folder followed by Setup.exe
- 2. Follow the instructions
- 3. Drivers will be installed automatically

#### Step 2 - Install 3G Drivers

1. Open the step2.3G folder followed by Quectel USB Drivers For

#### UC20&UC15&EC20\_V1.1.exe

- 2. Follow the instructions
- 3. Drivers will be installed automatically

#### Step 3 – Install ALS Drivers

- 1. Open the step3.ALS folder followed by Setup.exe
- 2. Follow the instructions
- 3. Drivers will be installed automatically

#### Step 4 – Install Bluetooth Drivers

- 1. Open the step4.BT folder followed by Setup.exe
- 2. Follow the instructions
- 3. Drivers will be installed automatically

#### Step 5 – Install HSIC Drivers

- 1. Open the device manager
- 2. Right click on the device "Bridge device" and update driver software
- 3. Choose the Tab "Browse my computer for driver software".
- 4. Assign the **step5.HSIC** folder to the location.
- 5. Follow the instructions that the window shows
- 6. The system will help you to install the driver automatically

#### Step 6 – Install NFC Drivers

- 1. Open a Command Prompt as an Administrator
- 2. Execute the command "setup.exe /configxtal" under the folder "step6.NFC".
- 3. Follow the instructions that the window shows
- 4. The system will help you to install the driver automatically

#### Step 7 – Install USB2UAR Drivers

- 1. Open the step7.USB2UARR folder followed by CP210xVCPInstaller\_x64.exe
- 2. Follow the instructions
- 3. Drivers will be installed automatically

#### Step 8 – Install WiFi Drivers

- 1. Open the device manager.
- 2. Right click on the device "Generic SDIO device" and update driver software
- 3. Choose the Tab "Browse my computer for driver software".
- 4. Assign the **step8.WiFi** folder to the location.
- 5. Follow the instructions that the window shows
- 6. The system will help you to install the driver automatically
- 7. Copy the NVRAM file "bcm943341wlagb.txt" to "Windows/system32/drivers".
- 8. Restart the system

www.texim-europe.cor

#### Step 9 — Install Sensor Driver

- 1. Open the device manager.
- 2. Right click on the device "Unknown device" and update driver software
- 3. Choose the Tab "Browse my computer for driver software".
- 4. Assign the **step9.SENSOR** folder to the location.
- 5. Follow the instructions that the window shows
- 6. The system will help you to install the driver automatically

#### Step 10— Install CAMERA App

- Enable the "developer mode" under the "Settings->Update & security->For developers".
- 2. Open the folder step10.CAMERA and find the file "Add-appDevPackage"
- 3. Right click on the file Add-appDevPackage and run with PowerShell.
- 4. Follow the instructions that the window shows
- 5. The system will help you to install the driver automatically

#### Step 11 – Install Flash Drivers

- 1. Open the step11.flash\_driver folder followed by Setup.exe
- 2. Follow the instructions
- 3. Drivers will be installed automatically

# Appendix A

Statements

www.texim-europe.com

#### A.1 Statements

#### Declarations and Safety Statements

#### Federal Communications Commission Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following conditions: (1) This device may not cause harmful interference (2) This device must accept any interference received, including interference that may cause undesired operation.

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment causes harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

RF Exposure Information (SAR)

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard employs a unit of measurement known as the Specific Absorption Rate (SAR). The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions accepted by the FCC with the EUT transmitting at the specified power level in different channels.

The highest SAR value for the device as reported to the FCC is 1.28 W/kg when placed next to the body.

The FCC has granted an Equipment Authorization for this device with all reported SAR levels evaluated as in compliance with the FCC RF exposure guidelines. SAR information on this device is on file with the FCC and can be found under the Display Grant section of <a href="http://www.fcc.gov/oet/ea/fccid">www.fcc.gov/oet/ea/fccid</a> on the FCC ID: OHBRTC700BWBGH

Federal Communication Commission (FCC) Radiation Exposure Statement This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End user must follow the specific operating instructions for satisfying RF exposure compliance.

#### A.2 Canadian Notice

#### IC Regulations

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

This Category II radio communication device complies with Industry Canada Standard RSS-310.

Ce dispositif de radio communication de catégorie II respecte la norme CNR-310 d'Industrie Canada.

#### IC Radiation Exposure Statement

This EUT is compliant with SAR for general population/uncontrolled exposure limits in IC RSS-102 and has been tested in accordance with the measurement methods and procedures specified in IEEE 1528. This equipment should be installed and operated with minimum distance 0 cm between the radiator and your body.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

The County Code Selection feature is disabled for product marketed in the U.S. and Canada.

For products available in the U.S./Canada markets, only channels 1-11 can be operated. The selection of other channels is not possible.

#### A.3 Safety Caution

#### Important Safety Instructions

#### Power Safety Requirement

Products with electrical current ratings up to 3A and weighs more than 1 Kg must use approved power cords greater than or equal to: VCTF, 3G or 0.75mm<sup>2</sup>. Basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

- Do not use this product near water, for example, near a bathtub, wash bowl, kitchen sink or laundry tub, in a wet basement or near a swimming pool.
- Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
- Do not use the telephone to report a gas leak in the vicinity of the leak.
- Use only the power cord and batteries indicated in this manual. Do not dispose of batteries in a fire. They may explode. Check with local codes for possible special disposal instructions.

#### Instructions importantes de sécurité.

#### Exigences de sécurité concernant l'alimentation.

Les produits dont le courant électrique monte jusqu'à 3A et pesant plus de 1Kgs doivent utiliser un cordon d'alimentation approuvé égal ou supérieur à VCTF, 3G ou 0.75mm<sup>2</sup>

Des mesures de précaution de base doivent toujours être suivies afin de réduire les risques d'incendie, de choc électrique et de blessures aux personnes, incluant :

- Ne pas utiliser ce produit près de l'eau, par exemple dans une baignoire, une cuvette, un évier, une machine à laver, un sous-sol humide ou une piscine.
- Eviter d'utiliser un téléphone (autre que sans fil) pendant un orage électrique ? il y a un risque de choc électrique à distance lié à la foudre.

- Ne pas utiliser le téléphone pour alerter lors d'une fuite de gaz si vous êtes dans le voisinage de la fuite
- Utiliser seulement le cordon d'alimentation et la batterie indiqués dans le manuel. Ne pas jeter les batteries dans le feu. Elles pourraient exploser. Vérifier les dispositions locales de recyclage.

### A.4 Battery Disposal

A	There is a risk of explosion if the battery is replaced by an incorrect type. Dispose of used batteries according to the instructions. <i>Il y a un risque d'explosion si la batterie est remplacée par un autre type incorrect.</i>
	Disposer de la batterie en accord avec les instructions.
X	This symbol indicateds that the battery should NOT be placed in municipal waste.
	DO NOT throw the tablet with municipal waste. This product is designed for proper reuse of parts and recycling. This symbol indicates that the products (electrical, electronic equipment and mercury-containing button cell battery) should not be placed in municipal waste. Check local regulations for disposal of electronic products.
<b>1</b>	SAFE TEMP : The RTC-700M should only be used in environments between -20°C (-4°F) and 50°C (122°F).

#### Regulatory information / Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment.

The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its

authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

#### A.5 Battery Caution

There is a danger of explosion if the battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer. Dispose of used batteries according to the manufacturer's instructions.

Il y a un risque d'explosion si la batterie est remplacée par un autre type incorrect. Disposer de la batterie en accord avec les instructions.

#### Regulatory information / Disclaimers

Installation and use of this Wireless LAN device must be in strict accordance with the instructions included in the user documentation provided with the product. Any changes or modifications (including the antennas) made to this device that are not expressly approved by the manufacturer may void the user's authority to operate the equipment. The manufacturer is not responsible for any radio or television interference caused by unauthorized modification of this device, or the substitution of the connecting cables and equipment other than manufacturer specified. It is the responsibility of the user to correct any interference caused by such unauthorized modification, substitution or attachment. Manufacturer and its authorized resellers or distributors will assume no liability for any damage or violation of government regulations arising from failing to comply with these guidelines.

# A.6 Adapter Caution

This RTC is for use with model NO. FSP036-RBBN2

Ce modèle RTC est à utilizer avec le modèle n° FSP036-RBBN2.

#### A.7 FCC Interference Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device and its antenna(s) must not be co-located or operating in conjunction with any other antenna or transmitter.

#### IMPORTANT NOTE:

#### Federal Communication Commission (FCC) Radiation Exposure Statement

This EUT is compliance with SAR for general population/uncontrolled exposure limits in ANSI/IEEE C95.1-1999 and had been tested in accordance with the measurement methods and procedures specified in OET Bulletin 65 Supplement C.



# **Contact details**

The Netherlands	Belgium	UK & Ireland
Elektrostraat 17 NL-7483 PG Haaksbergen	Zuiderlaan 14 bus 10 B-1731 Zellik	St. Mary's House, Church Lane Carlton Le Moorland Lincoln LN5 9HS
T: +31 (0)53 573 33 33 F: +31 (0)53 573 33 30 E: nl@texim-europe.com	T: +32 (0)2 462 01 00 F: +32 (0)2 462 01 25 E: belgium@texim-europe.com	T: +44 (0)1522 789 555 F: +44 (0)845 299 22 26 E: uk@texim-europe.com
Germany North	Germany South	Austria
Bahnhofstrasse 92 D-25451 Quickborn	Martin-Kollar-Strasse 9 D-81829 München	Warwitzstrasse 9 A-5020 Salzburg
T: +49 (0)4106 627 07-0 F: +49 (0)4106 627 07-20 E: germany@texim-europe.com	T: +49 (0)89 436 086-0 F: +49 (0)89 436 086-19 E: germany@texim-europe.com	T: +43 (0)662 216 026 F: +43 (0)662 216 026-66 E: austria@texim-europe.com
Nordic region	General information	
Sdr. Jagtvej 12 DK-2970 Hørsholm		
T: +45 88 20 26 30 F: +45 88 20 26 39 E: nordic@texim-europe.com	info@texim-europe.com www.texim-europe.com	



