



Distributed by:



Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Series/Type:
Ordering code:

Date: 2019-04-17
Version: 1.5

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

1 Contents

1	Contents.....	2
2	Introduction	3
2.1	Ordering code	3
2.2	Content of evaluation driver kit	4
3	Installation.....	6
3.1	Hardware installation (connector and board diagram)	6
3.2	Initialization	7
3.3	Dimensions of the driver boards	8
3.4	Software installation.....	9
3.4.1	Software installation.....	9
3.4.2	Software setup	9
4	“PowerHap™ signal configurator” software description	10
4.1	Choosing the right COM port	11
4.2	Signal configuration	11
4.3	Configuration for „Push“	12
4.4	Configuration for „Release“	13
5	Preferred software settings for PowerHap™ types	14
5.1	Typical signal parameter for the 0909H011V060 type	14
5.2	Typical signal parameter for the 1313H018V120 type	15
5.3	Typical signal parameter for the 2626H023V120 type	16
5.4	Configuration of a *.csv file	17
6	Detailed description of hardware	18
6.1	Electrical description	18
6.2	Circuit diagram of driver board	18
6.3	External trigger function description	22
6.4	Parallel operation on one output channel for test purpose	23
7	Software revision history list	24
	Display of ordering codes for TDK Electronics products	24

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

2 Introduction

This evaluation kit was developed to support engineers during their first steps designing applications with the PowerHap™ piezo actuators for haptic feedback.

This evaluation kit is available in two versions.

The design is not qualified regarding manufacturing and operation over the whole operation temperature range or lifetime.

The evaluation kits provided by TDK are intended to be used for functional testing only.

Due to their purpose, evaluation driver kits are not intended to be used by the same procedures regarding returned material analysis (RMA) and process change notification (PCN) as regular products.



The board described is an evaluation driver board dedicated for laboratory environment only. It operates at voltages up to 124 V. This board must be operated by qualified and skilled personnel familiar with all applicable safety standards.

2.1 Ordering code

Version 1 was designed to drive up to five PowerHap. It can be ordered by using the ordering code Z63000Z2910Z 1Z 7.

Version 2 can drive a single PowerHap actuator at a time. It can be ordered by using the ordering code Z63000Z2910Z 1Z 1.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

2.2 Content of evaluation driver kit

One channel evaluation kit

- Power supply (12 V_{DC} / 1 A) shipped with two pin connector (euro connector)
- Micro USB cable
- One part of each PowerHap type
 - 2626H023V120; 1313H018V120; 0909H011V060
- USB memory stick
 - PC configuration software*
 - Documentation
- 4 pcs. female connectors
- 1-channel driver board

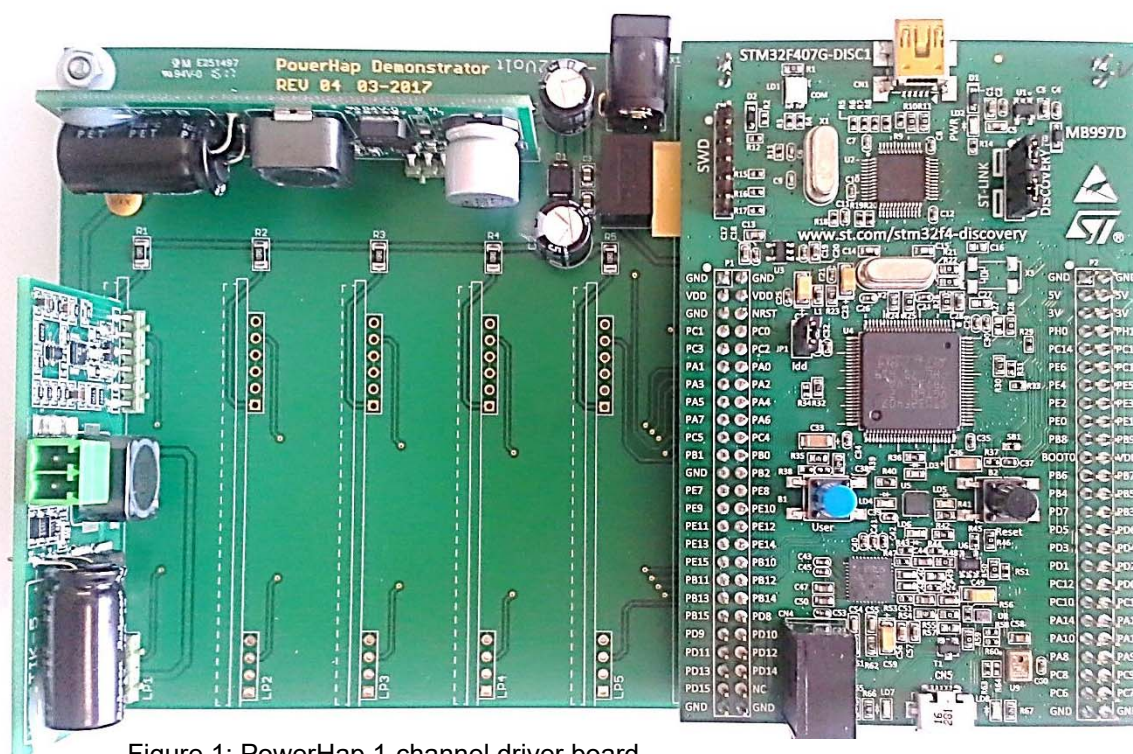


Figure 1: PowerHap 1-channel driver board.

*In case your company policy does not allow the use of USB sticks pls. contact your TDK sales contact person.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

Five channel evaluation kit

- Power supply (12 V_{DC} / 1 A) shipped with two pin connector (euro connector)
- Micro USB cable
- One part of each PowerHap type
 - 2626H023V120; 1313H018V120; 0909H011V060
- USB memory stick
 - PC configuration software*
 - Documentation
- 8 pcs. female connectors
- 5-channel driver board

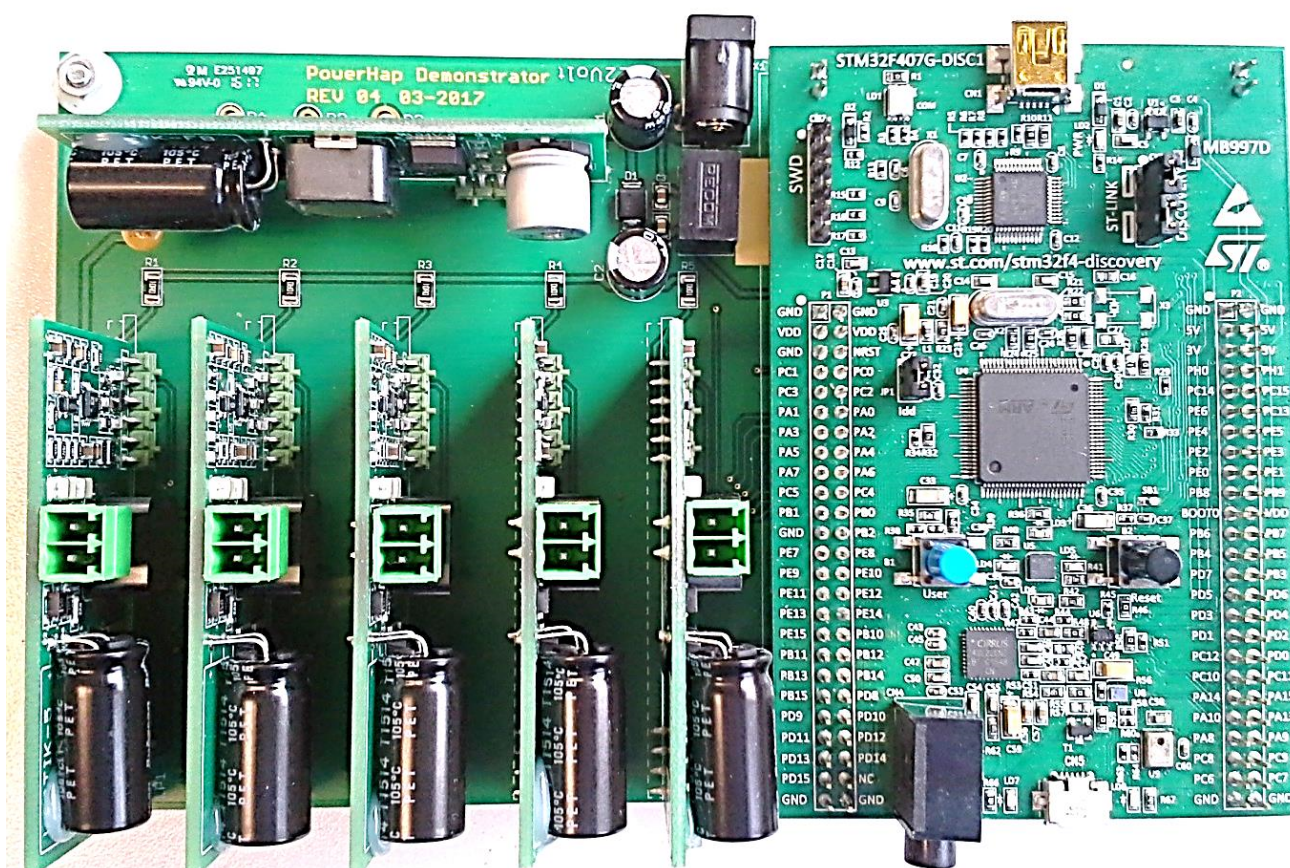


Figure 2: PowerHap 5-channel driver board.

* In case your company policy does not allow the use of USB sticks pls. contact your TDK sales contact person.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

3 Installation

The driver boards are designed to drive the different PowerHap types of TDK. As described in the picture above, the main parts on the demonstrator are the base board, the step up converter, the output driver boards (up to five output driver boards are possible) and the CPU unit.

Configuration software comes with the demonstrator board. With this software, a lot of parameters can be adjusted (like the shape of the waveform, driving voltage, frequency, etc.) More details can be found in the software section.

3.1 Hardware installation (connector and board diagram)

The following sections provide an overview of the board including main features, key data, pin assignment and mechanical dimensions.

Example: One channel driver board

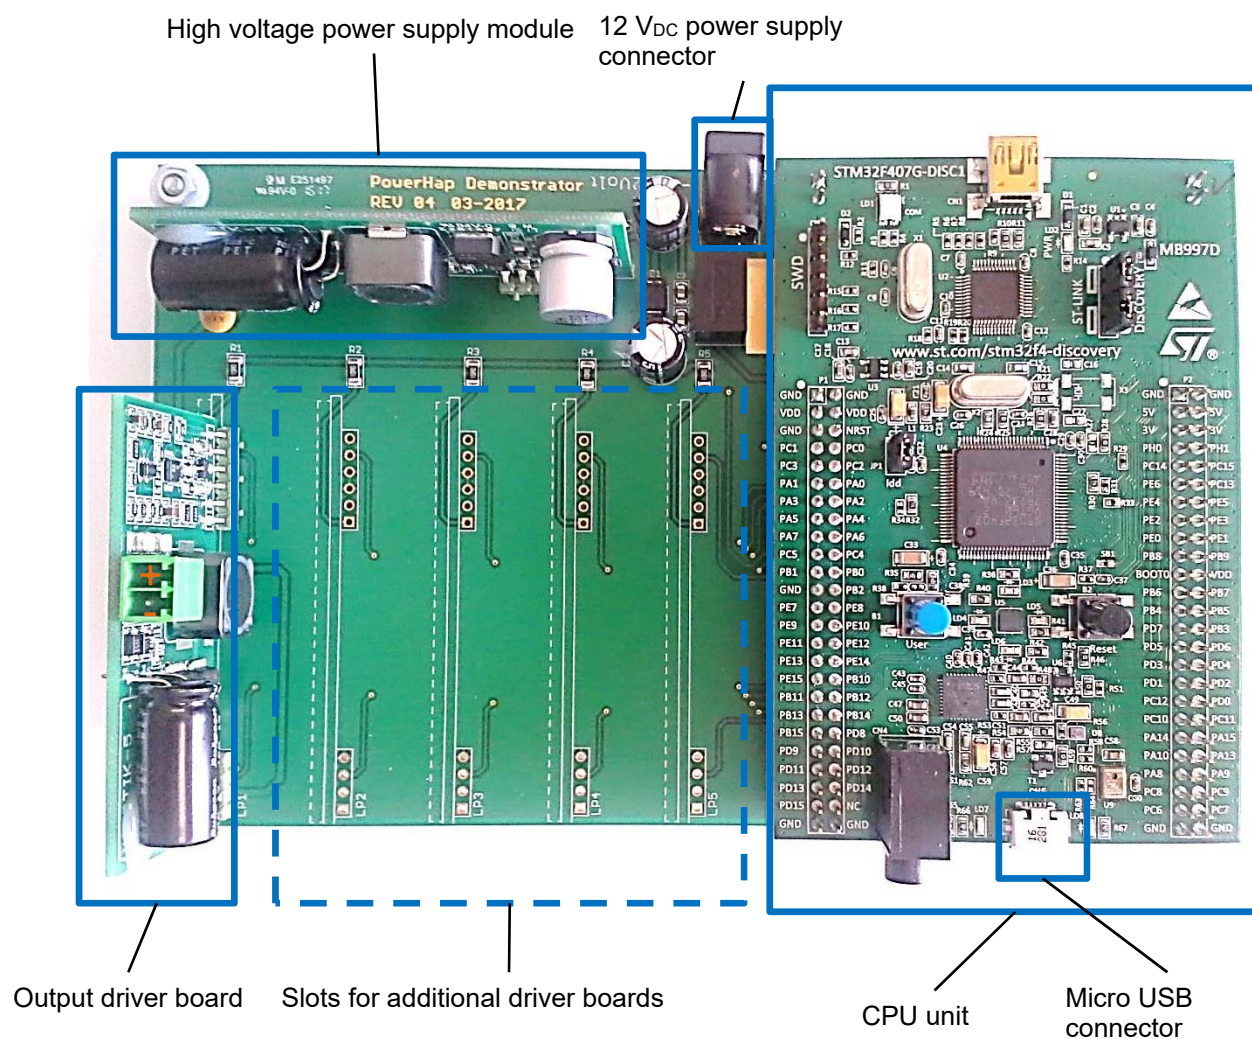


Figure 3: PowerHap 1-channel driver board connection diagram.

PPD PI AE/IE PD

2019-04-17

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

3.2 Initialization

After the driver board is powered up an initialization process is running. This takes some seconds. During this time it is recommended not to press any connected PowerHap

The initialization process is finished when the green LED (LD4) on the STM32F407G-DISC1 board is on

The LD4 is located between the blue and the black switch on the board.

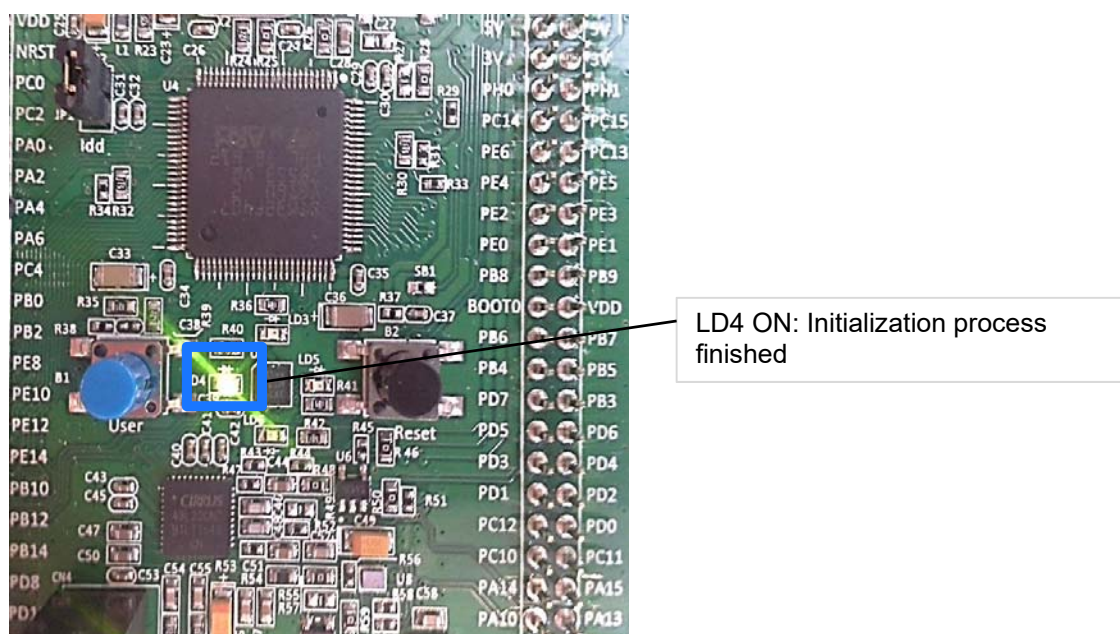


Figure 4: Driver board with control LED between blue and black switch.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

3.3 Dimensions of the driver boards

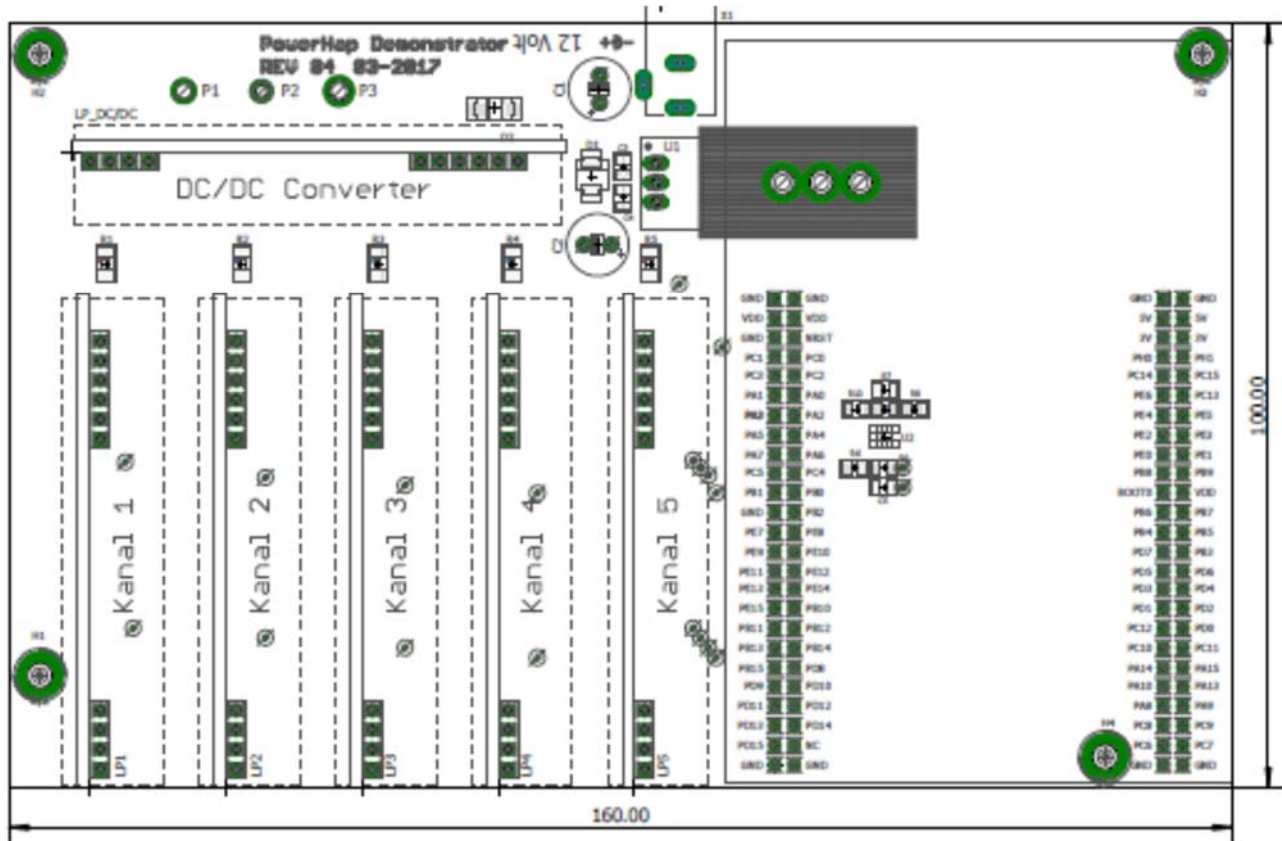


Figure 5: Outer dimensions of the baseboard (length x width L x W = 160 mm x 100 mm).

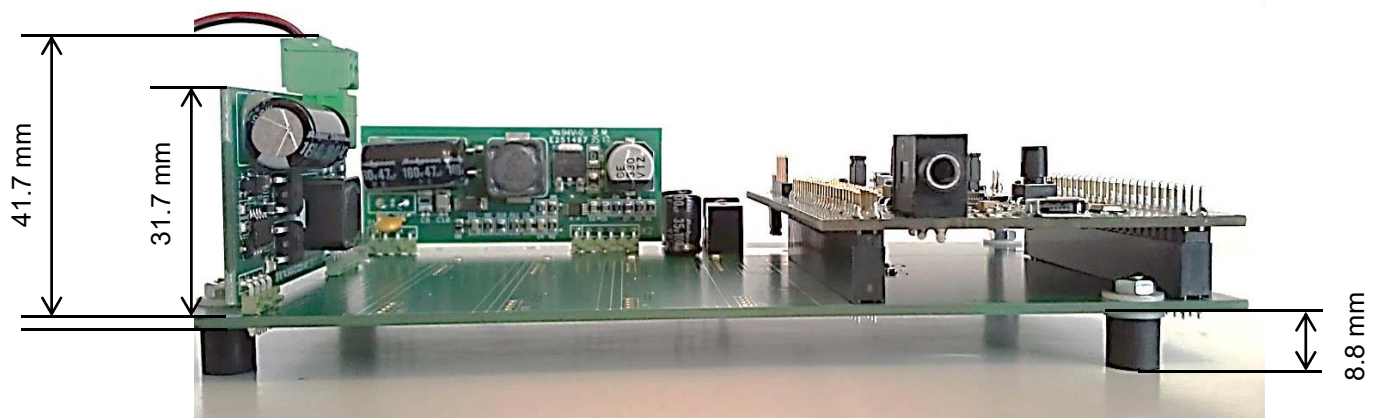


Figure 6: Height of the driver (total height: 41.7 mm; height PCB: 31.7 mm).

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

3.4 Software installation


3.4.1 Software installation

The software will work with Windows 7 versions and higher. For the installation of the software you will need administrator rights on your computer

USB driver installation

Before connecting the board to a computer, the USB driver for the system must be installed. The relevant driver can be found on the USB stick in the folder "USB Driver"


- a. For 32 bit Windows versions execute the file "VCP_V1.3.1_Setup.exe"
- b. For 64 bit Windows versions execute the file "VCP_V1.3.1_Setup_x64.exe"



- c. Follow the installing instructions on your computer

Installation of the configurator software

- a. In the folder "Configurator_V1.2.0.3" execute the file "Setup Feedbacktaster 5-fach.msi"
- b. Follow the installation instructions on your computer

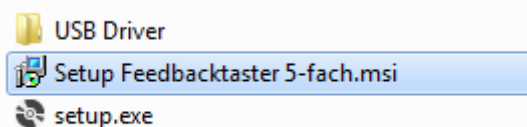

- c. A restart of the computer after the software installation is recommended

3.4.2 Software setup

- The software is ready to use after successful installation of the USB driver and the PowerHap Signal configurator. Before opening the PowerHap configurator you have to perform the following steps:
 1. Connect the demo board with a micro USB cable to your computer; use the micro USB port (see also section 3.1 for further details).
 2. Connect the piezo PowerHap device(s) to the output drivers(s)
 3. Power up the demo board by applying 12 V_{DC}
 4. Open the PowerHap Signal Configurator software on your computer
 5. Select the COM-port of the USB connection
 6. Click the "Connect" button to establish the USB connection between demo board and PC

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

4 “PowerHap signal configurator” software description

Functionality of the PowerHap signal configurator

Configuration of the feedback signals

Manual trigger

Data transfer via USB

Upload of a signal configuration from a csv file

Saving of the configuration

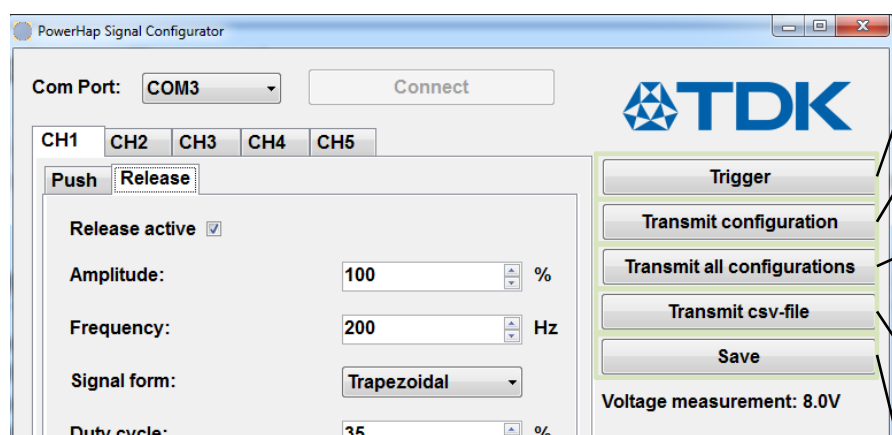


Figure 7: „PowerHap Signal Configurator” software detailed description.

A software trigger can be given to the selected output; for the „Push” signal.

The settings of the selected channel are transmitted to the driver board

The settings of all channels are transmitted to the driver board

A csv file configuration can be transmitted to the selected channel of the driver board. Please note that the parameters from a csv file are not displayed in the fields of a channel. See also section 5.4 for further details

With the „Save” button all adjustments are saved. When the board is powered up it comes with these saved values, otherwise the adjustments are lost when the system is switched off.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

4.1 Choosing the right COM port

If there are other evaluation driver boards are connected to your computer you will have the possibility to choose more than one COM port.

You can find out the right port which is used for the PowerHap demonstrator port in the "Control Panel" of your computer

Control Panel -> Device Manager -> (Ports (COM & LPT))

In this window you can see which COM port is assigned to the PowerHap demonstrator board (see picture below; in that case it is the COM port 3)


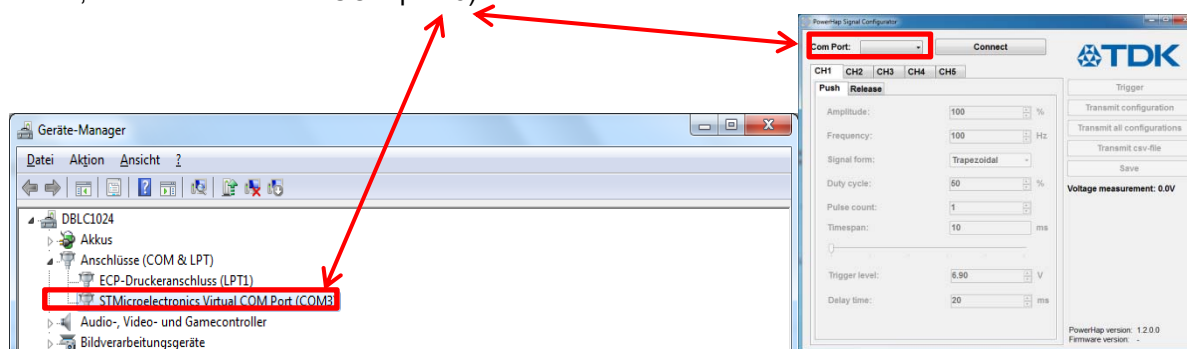


Figure 8: PowerHap signal configurator software COM port selection.

4.2 Signal configuration

The configuration always refers to the selected channel (1 to 5); each channel has its own tab. For the single channel driver board only channel 1 is functional.

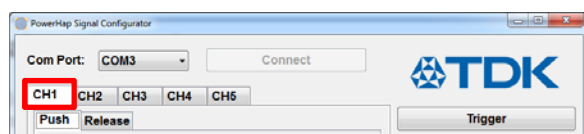

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

4.3 Configuration for „Push“

- Amplitude: 5 to 100% (100% correlates to about 115 V)
- Frequency: 20 to 300 Hz
- Signal form: Selection among Trapezoidal / sine square wave / Saw tooth
- Duty cycle: 35 to 75%; available for the waveform "Trapezoidal"
- Pulse count: 1 to 1000; Outputs the adjusted amount of positive voltage pulses to the at set channel output.
- Trigger level: 0 to 12 V
- In idle state, a voltage level of example 8.4 V is displayed on the according channel. This voltage is decreased by the generated voltage from the PowerHap when it is pressed. When this voltage is lower than the adjusted trigger level, the haptic feedback is triggered. It is recommended to set the trigger level about 1 V to 1.5 V below the idle state voltage. The lower the trigger level the harder you have to press the PowerHap to trigger the haptic feedback.
- "Delay time: During the time span defined by the delay time the system is not active and will therefore not detect a force applied to the piezo element. The delay time measurement starts as soon as the previous actuation mode has finished.

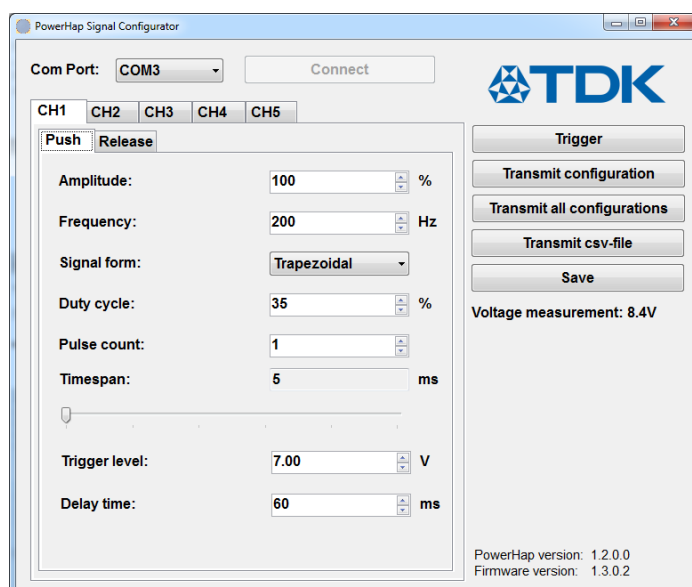


Figure 9: "PowerHap signal configurator" push settings.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

4.4 Configuration for „Release“

If the “Release active box” is checked, a second haptic feedback will be triggered when the force from the PowerHap is removed.

Comment: For normal haptic feedback applications we recommend to switch off the “release active” box.

- Amplitude: 5 to 100 % (100 % correlates to about 115 V)
- Frequency: 20 to 300 Hz
- Signal form: Selection among trapezoidal / sine square wave / sawtooth
- Duty cycle: 35 to 75 %; available for the waveform “Trapezoidal”
- Pulse count: 1 to 1000; with the pulse count the amount of pulses per trigger event can be chosen.
- Release timeout:
- If the release of the button is not detected within the adjusted time, no “Release” signal will be given to the output. After this adjusted time, the board is ready to detect a “push” signal from the button
- Release gradient:
When releasing the button, the gradient of the input voltage vs. time is measured by the demo board. If the voltage change exceeds the adjusted value, the release output signal is triggered. A value of 1 corresponds to a gradient of 0.3 V/s.

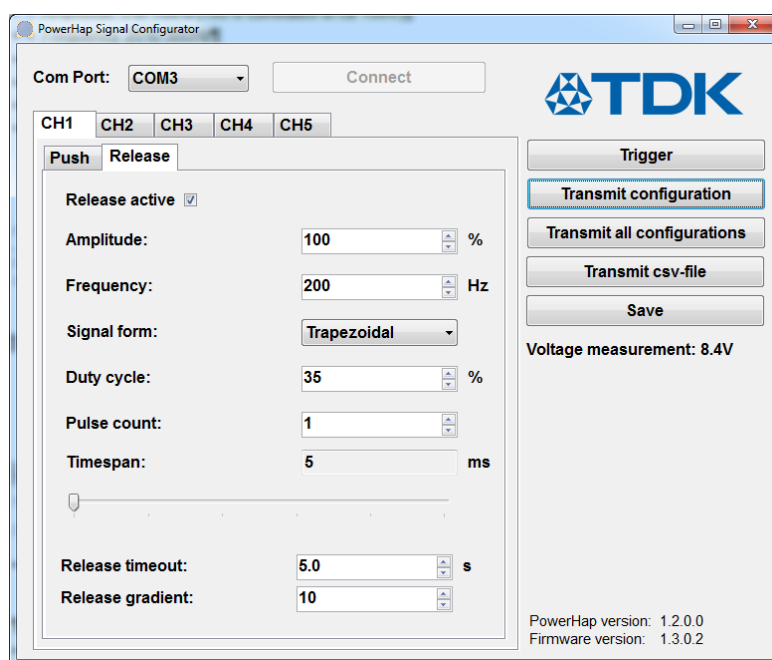


Figure 10: “PowerHap signal configurator” release settings.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

5 Preferred software settings for PowerHap types

5.1 Typical signal parameter for the 0909H011V060 type

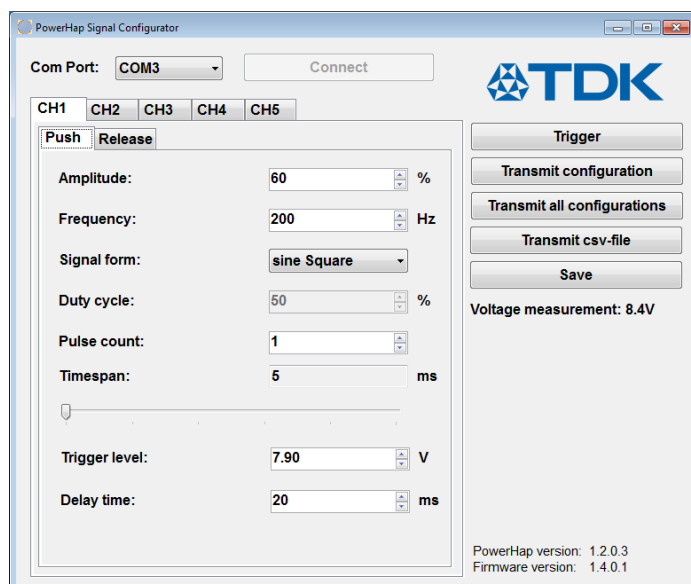


Figure 11: recommended settings for 0909H011V060 type.

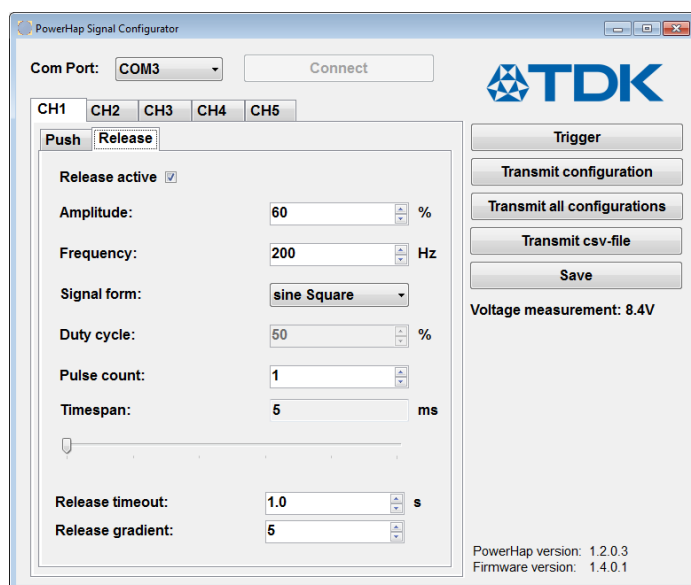


Figure 12: Optional setting: In case no second pulse is required when releasing the pressure remove the check mark in the box "Release active".

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

5.2 Typical signal parameter for the 1313H018V120 type

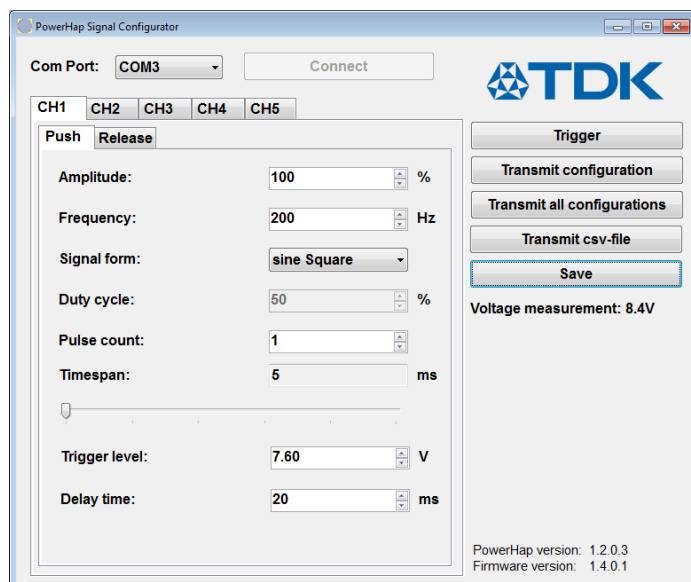


Figure 13: Recommended settings for 1313H018V120 type.

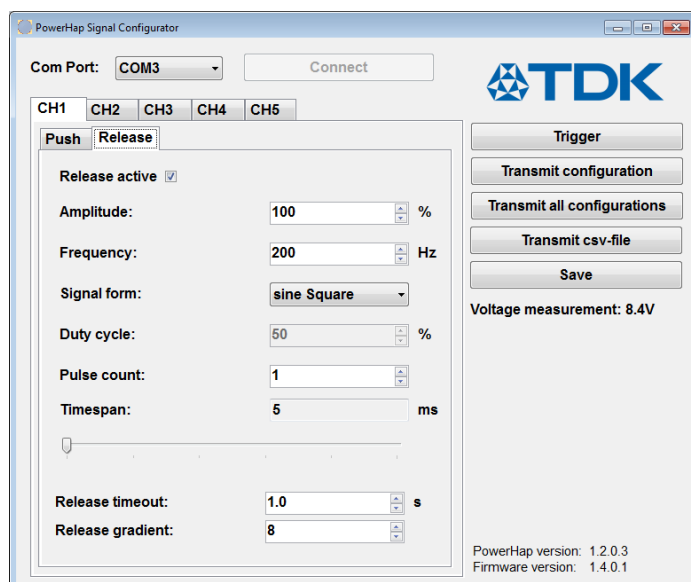


Figure 14: Optional setting: In case no second pulse is required when releasing the pressure remove the check mark in the box "Release active".

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

5.3 Typical signal parameter for the 2626H023V120 type

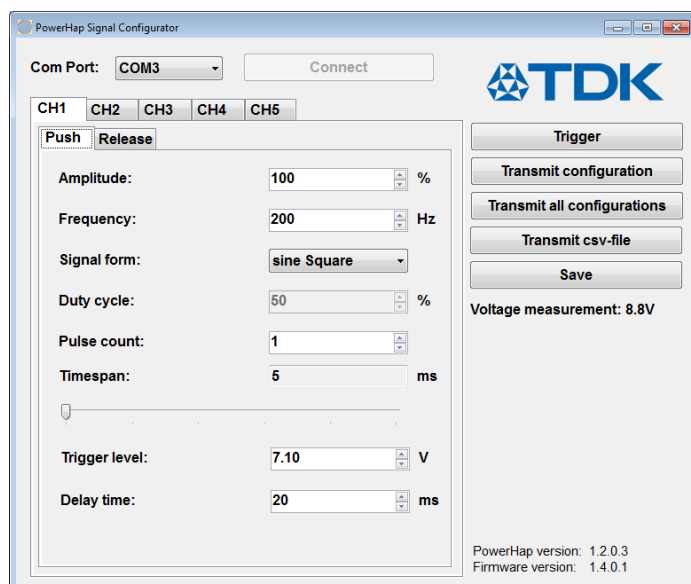


Figure 15: Recommended settings.

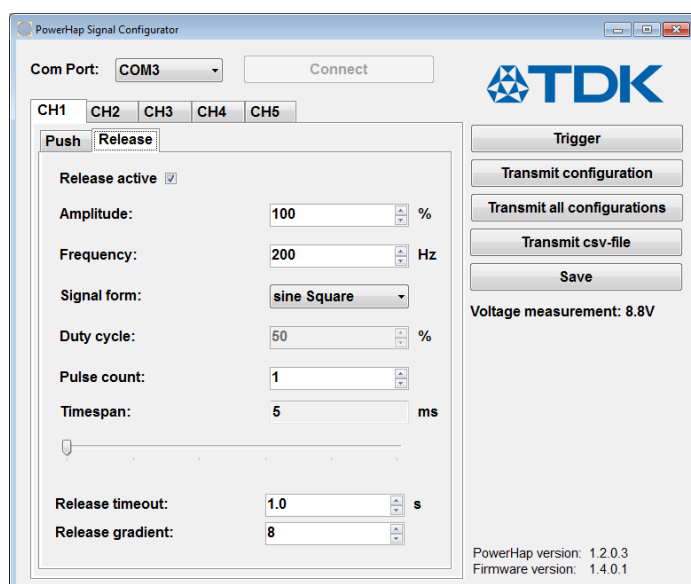


Figure 16: Optional item: In case no second pulse is required when releasing the pressure remove the check mark in the box "Release active".

Note: This setting can also be used for the 6005H070V120 and 6005H090V120 which are not included in the evaluation driver kit.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V


Preliminary data

5.4 Configuration of a *.csv file

- A customized waveform configured via a *.csv file can be transmitted to the PowerHap demonstrator board.

Format of a *.csv file: semicolon is required as separator.

- The values of a *.csv file can be changed i.e. with Excel or Notepad
 - Maximum amount of time / voltage values: 20
 - Linear interpolation between two “time / voltage” values (see also below diagram).
 - “Repetition: how often is the “push” or “release” waveform given to each single output.
 - Time / voltage columns:
 - A certain voltage value can be adjusted at a certain time as shown in below table.
 - The time column defines the duration until the target voltage level (defined in voltage column) is reached. The example shown in below diagram and table show the total timeline of voltage levels (“waveform”) which is applied to the PowerHap. In the shown example the total timespan of the defined waveform is 4600 μ s.

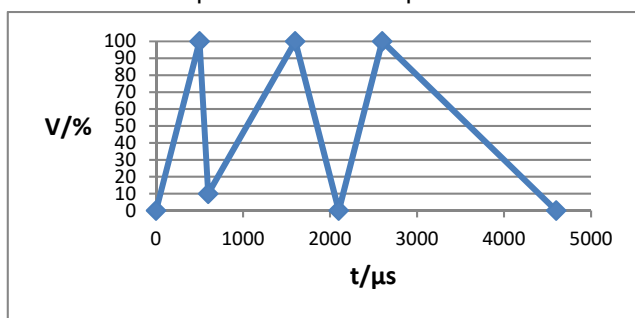

- Unit for time: μ s
 - Unit for voltage: V
- With the button “Transmit *.csv-file” the values of the selected file will be transmitted to the board
- With the “save” button the configuration is stored on the **non-volatile** memory of the demonstrator board. This means that after powering up the board this saved configuration is available

	A	B	C	
	1	Mode	Wiederholungen	
	2			
Means „push“	3	"druecken"	4	Repetition of the „push“ signal
	4			
	5	Zeit	Sollspannung	
	6	Mikrosekunden]	[Volt]	
	7	500	100	
	8	100	10	
	9	1000	100	Voltage column for the push signal
time column for push	10	500	0	
	11	500	100	
	12	2000	0	
	13			
	14	Mode	Wiederholungen	
	15			
Means „release“	16	"loslassen"	1	Repetition of the „release“ signal
	17			
	18			
	19	Zeit	Sollspannung	
	20	1000	100	
time column for release	21	5000	0	Voltage column for the push signal
	22			

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

6 Detailed description of hardware

6.1 Electrical description

Base board

12 V_{DC} power supply:

High voltage power supply:

Output driver:

Slots for additional driver boards:

CPU unit:

unit.

Micro USB connector

On the base board the different units are installed

Connect a 12 V_{DC} power supply to this jack

Step up converter; 124 V_{DC} for the output driver are generated

The PowerHap actuators are connected to this output stage.5 output drivers are installed for a 5-channel driver board.

Up to five output driver boards can be driven

A STM32F407G407G-DISC1 evaluation driver board is used as CPU

Changes of the configuration can be done with this interface

6.2 Circuit diagram of driver board

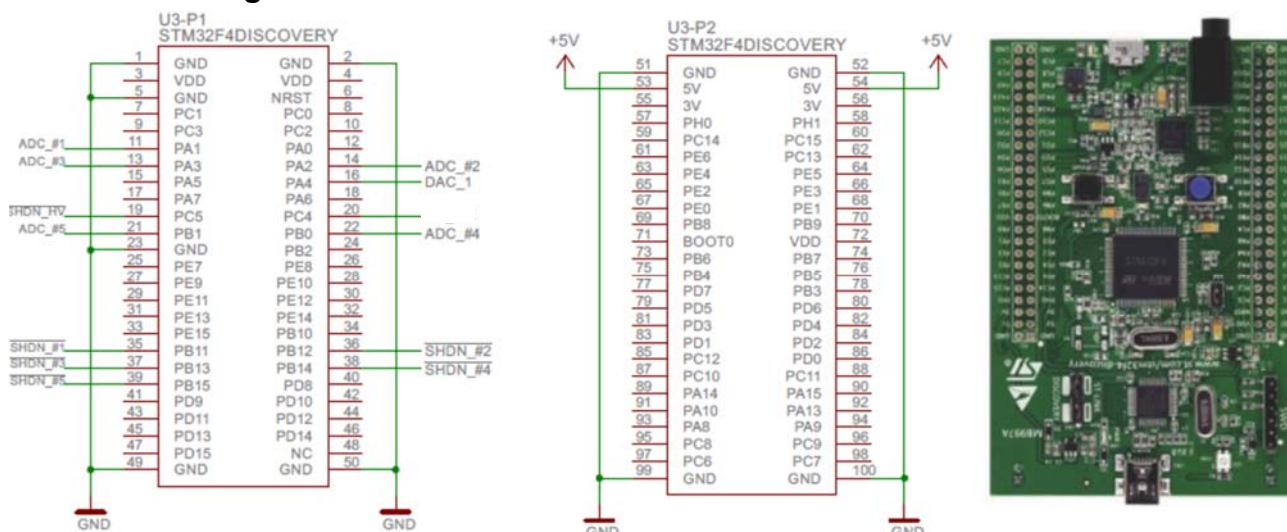


Figure 17: STMicroelectronics evaluation driver board STM32F407G-DISC1.

Pin Description:

ADC_#1 to ADC_#5:

Via these inputs the system monitors the voltage across the piezo elements (5 inputs for potentially 5 piezo elements) in order to detect when force is applied to the piezo element, resulting in a compression (sensing function).

SHDN_#1 to SHDN#5:

Selection of the driver board


DAC_1:

Analogue output, shape of the waveform is given on this output:

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

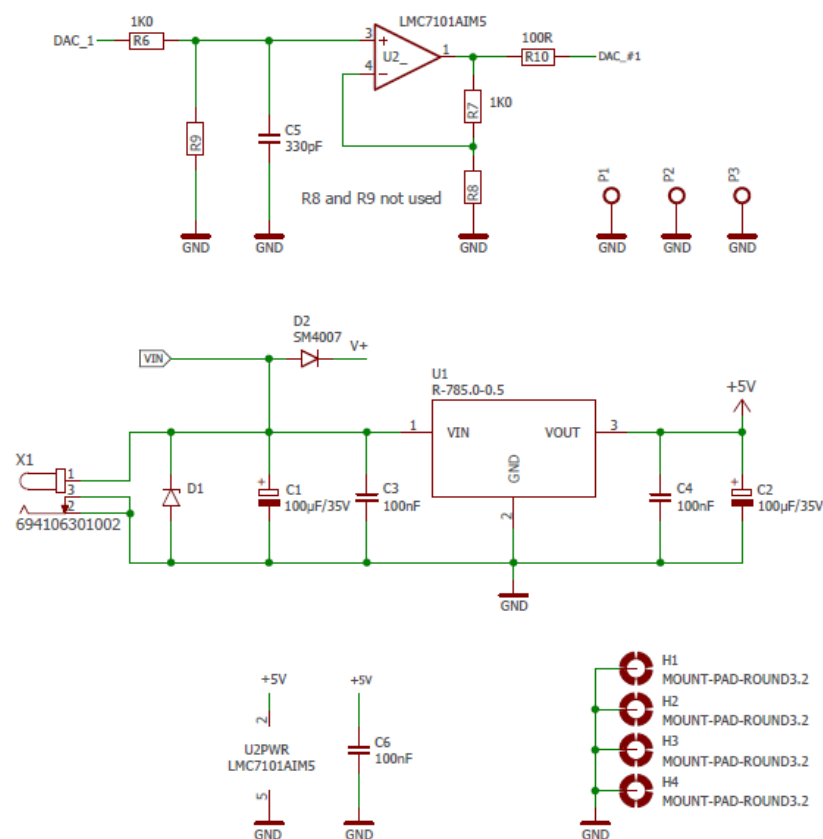

Signal conditioning of the
analog output
Resistors R8 and R9 not used

5 V power supply

Figure 18: Schematic of 5 V supply; DAC amplifier.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

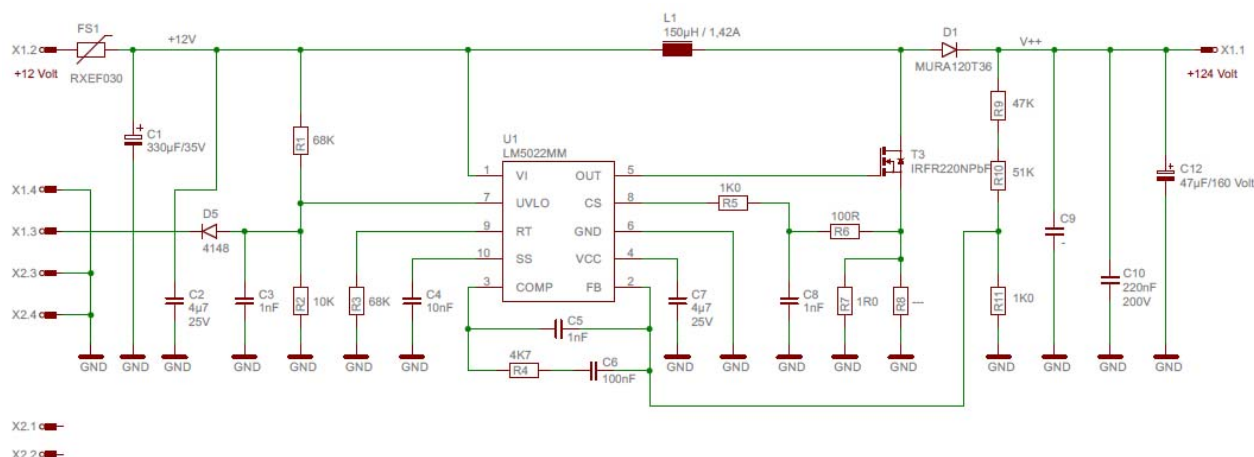


Figure 19: Schematic of the high voltage power supply module.

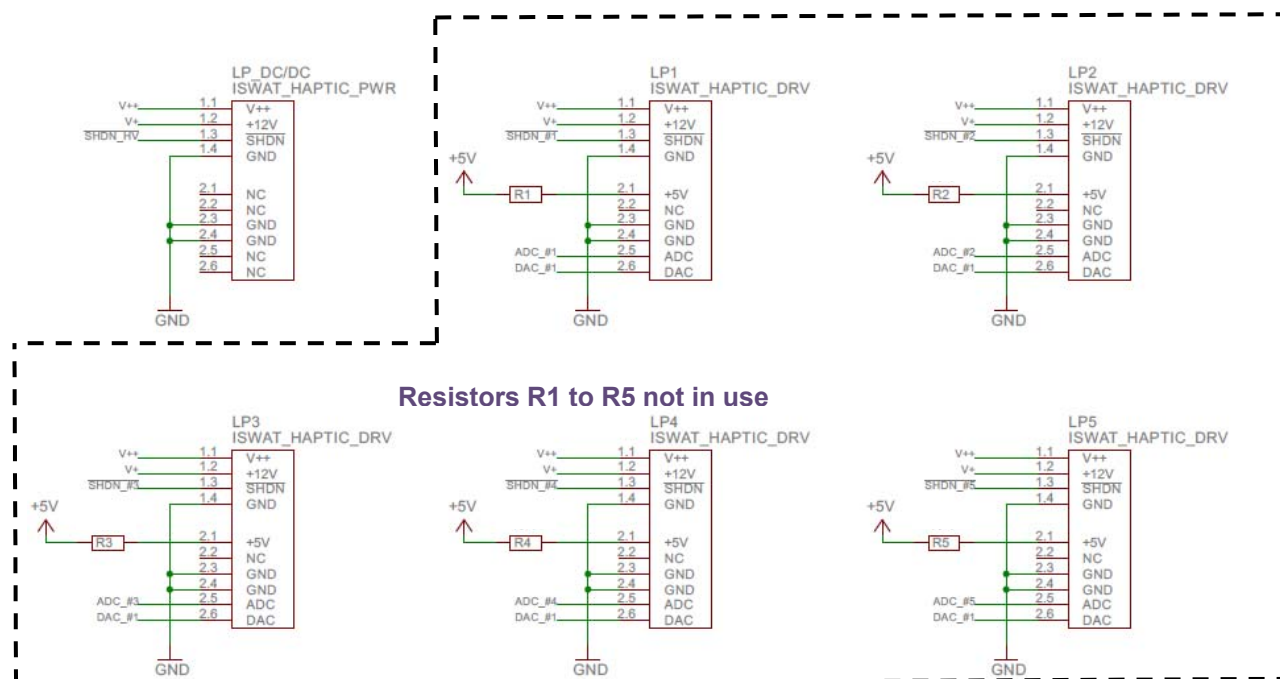


Figure 20: On this distribution board up to five output driver boards can be placed and controlled shown with the dashed line on the schematic above.

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

6.3 External trigger function description

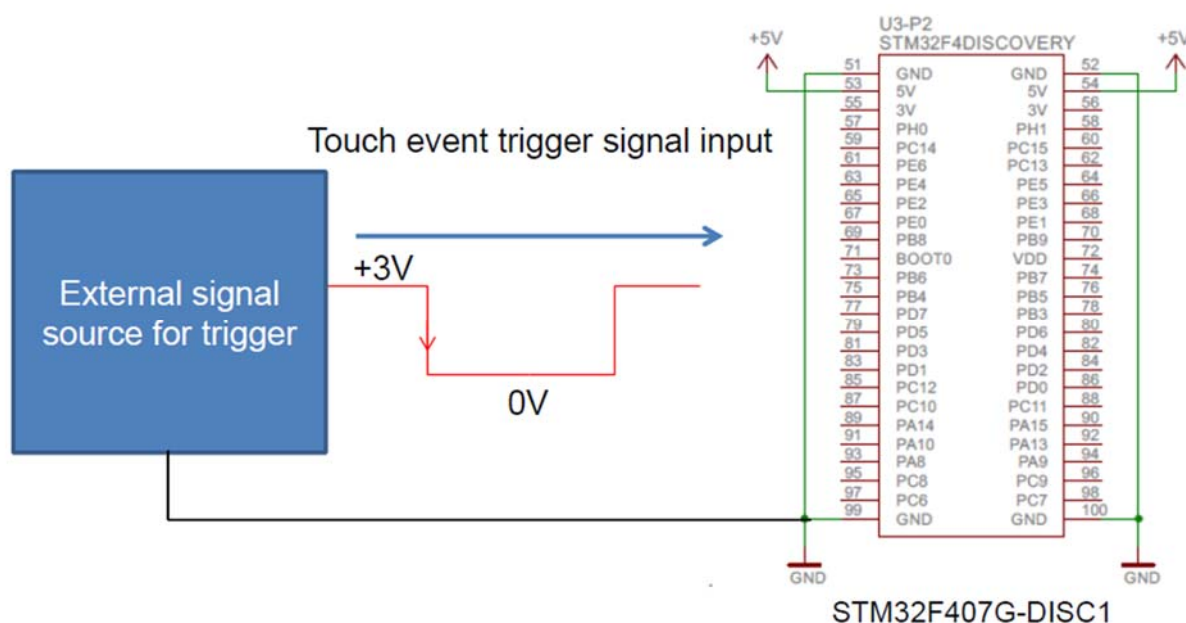


Figure 22: There is the possibility to trigger the PowerHap™ with an external signal as described below.

Input pins on the microcontroller for triggering

Input "PE1"	Trigger on channel 1
Input "PE2"	Trigger on channel 2
Input "PE3"	Trigger on channel 3
Input "PE4"	Trigger on channel 4
Input "PE5"	Trigger on channel 5
Input "PE6"	Trigger on channel 1 to 5 simultaneously; the adjusted waveform of channel 1 is given to all 5 channels

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

Trigger signal description

With the external trigger signal the adjusted waveform which is adjusted with the “PowerHap Signal Configurator” is given to the output driver. E.g. a trigger on the input PE1 gives an output signal on the output driver 1.

- A falling edge on the trigger signal (3 V to 0 V) gives the adjusted “push” signal to the output
- If a “release” signal is adjusted in the “PowerHap Signal Configurator”, the release signal is given to the output with a rising edge on the trigger level “0V to 3 V”
- A trigger signal on the input PE6 triggers all 5 channels simultaneously. The waveform given to all channels is the configured waveform of channel 1
- Voltage level on the input pins on the microcontroller:
 - 0 V low
 - 3 V high
- The external trigger and the trigger with the PowerHap work in parallel
 - If only the external trigger should be used, it is recommended to set the trigger level to 1 V in the configuration software
 - This makes sure that the output cannot be triggered with the sense function of the PowerHap

Important notes when connecting input pins on the microcontroller

- The signal ground (GND) from the trigger source has to be connected to the ground (GND) level of the microcontroller board
- The ground (GND) level must not be connected to earth
- The trigger signal can also be applied with a photo coupler with the advantage of a galvanic isolation between the signal source and the PowerHap demonstrator

6.4 Parallel operation on one output channel for test purpose

For test purpose, it is possible to connect more than one PowerHap on one output channel. Depending on the mode of operation (amplitude and frequency of the output signal, type of PowerHap) it is listed below how many parts can be connected.

If two PowerHap of the types 2626H023V120 6005H070V120 and 6005H090V120 are connected to one output of the driver, it is recommended to drive it less than 30 s continuously when the output is adjusted to the maximum frequency of 300 Hz and amplitude of 100%.

2626H023V120 type: 2 parts on one output channel (f = 300 Hz; amplitude = 100%)
 6005H070V120* type: 2 parts on one output channel (f = 300 Hz; amplitude = 100%)
 6005H090V120* type: 2 parts on one output channel (f = 300 Hz; amplitude = 100%)
 1313H018V120 type: 4 parts in parallel on one channel (f = 300 Hz; amplitude = 100%)
 0909H011V060 type: 4 parts in parallel on one channel (f = 300 Hz; amplitude = 50%)

When multiple pulses are given to the output with two connected 2626H023V120 types, please note that the amplitude of the output voltage will decay with each pulse. The reason for this behaviour is the higher load on the output.

** not included in the evaluation driver kit*

Piezo Haptic Actuators - PowerHap

Application note for evaluation kit 120 V

Preliminary data

7 Software revision history list

Firmware version	Date	Remark
1.4.0.1	02.04.2019	Improvements in software functionality
1.3.0.2	30.6.2017	--

Revision of the firmware

Configurator version	Date	Remark
1.2.0.3	02.04.2019	Improvements in software functionality
1.2.0.0	30.6.2017	--

Revision of the PC configurator

The revisions of the firmware and PC configurator software is shown in the bottom of the configurator software. The firmware is shown when the board is connected.

Display of ordering codes for TDK Electronics products

The ordering code for one and the same product can be represented differently in data sheets, data books, other publications, on the company website, or in order-related documents such as shipping notes, order confirmations and product labels. **The varying representations of the ordering codes are due to different processes employed and do not affect the specifications of the respective products.** Detailed information can be found on the Internet under www.tdk-electronics.tdk.com/orderingcodes.

Important notes

The following applies to all products named in this publication:

1. Some parts of this publication contain **statements about the suitability of our products for certain areas of application**. These statements are based on our knowledge of typical requirements that are often placed on our products in the areas of application concerned. We nevertheless expressly point out **that such statements cannot be regarded as binding statements about the suitability of our products for a particular customer application**. As a rule we are either unfamiliar with individual customer applications or less familiar with them than the customers themselves. For these reasons, it is always ultimately incumbent on the customer to check and decide whether a product with the properties described in the product specification is suitable for use in a particular customer application.
2. We also point out that **in individual cases, a malfunction of electronic components or failure before the end of their usual service life cannot be completely ruled out in the current state of the art, even if they are operated as specified**. In customer applications requiring a very high level of operational safety and especially in customer applications in which the malfunction or failure of an electronic component could endanger human life or health (e.g. in accident prevention or life-saving systems), it must therefore be ensured by means of suitable design of the customer application or other action taken by the customer (e.g. installation of protective circuitry or redundancy) that no injury or damage is sustained by third parties in the event of malfunction or failure of an electronic component.
3. **The warnings, cautions and product-specific notes must be observed.**
4. In order to satisfy certain technical requirements, **some of the products described in this publication may contain substances subject to restrictions in certain jurisdictions (e.g. because they are classed as hazardous)**. Useful information on this will be found in our Material Data Sheets on the Internet (www.tdk-electronics.tdk.com/material). Should you have any more detailed questions, please contact our sales offices.
5. We constantly strive to improve our products. Consequently, **the products described in this publication may change from time to time**. The same is true of the corresponding product specifications. Please check therefore to what extent product descriptions and specifications contained in this publication are still applicable before or when you place an order.

We also **reserve the right to discontinue production and delivery of products**. Consequently, we cannot guarantee that all products named in this publication will always be available. The aforementioned does not apply in the case of individual agreements deviating from the foregoing for customer-specific products.

6. Unless otherwise agreed in individual contracts, **all orders are subject to our General Terms and Conditions of Supply**.
7. **Our manufacturing sites serving the automotive business apply the IATF 16949 standard**. The IATF certifications confirm our compliance with requirements regarding the quality management system in the automotive industry. Referring to customer requirements and customer specific requirements ("CSR") TDK always has and will continue to have the policy of respecting individual agreements. Even if IATF 16949 may appear to support the acceptance of unilateral requirements, we hereby like to emphasize that **only requirements mutually agreed upon can and will be implemented in our Quality Management System**. For clarification purposes we like to point out that obligations from IATF 16949 shall only become legally binding if individually agreed upon.

Important notes

8. The trade names EPCOS, CeraCharge, CeraDiode, CeraLink, CeraPad, CeraPlas, CSMP, CTVS, DeltaCap, DigiSiMic, ExoCore, FilterCap, FormFit, LeaXield, MiniBlue, MiniCell, MKD, MKK, MotorCap, PCC, PhaseCap, PhaseCube, PhaseMod, PhiCap, PowerHap, PQSine, PQvar, SIFERRIT, SIFI, SIKOREL, SilverCap, SIMDAD, SiMic, SIMID, SineFormer, SIOV, ThermoFuse, WindCap are **trademarks registered or pending** in Europe and in other countries. Further information will be found on the Internet at www.tdk-electronics.tdk.com/trademarks.

Release 2018-10

The Netherlands



Elektrostraat 17
NL-7483 PG Haaksbergen

T: +31 (0)53 573 33 33
F: +31 (0)53 573 33 30
E: nl@texim-europe.com

Belgium



Zuiderlaan 14 bus 10
B-1731 Zellik

T: +32 (0)2 462 01 00
F: +32 (0)2 462 01 25
E: belgium@texim-europe.com

UK & Ireland



St. Mary's House, Church Lane
Carlton Le Moorland
Lincoln LN5 9HS

T: +44 (0)1522 789 555
F: +44 (0)845 299 22 26
E: uk@texim-europe.com

Germany North



Bahnhofstrasse 92
D-25451 Quickborn

T: +49 (0)4106 627 07-0
F: +49 (0)4106 627 07-20
E: germany@texim-europe.com

Germany South



Martin-Kollar-Strasse 9
D-81829 München

T: +49 (0)89 436 086-0
F: +49 (0)89 436 086-19
E: germany@texim-europe.com

Austria



Warwitzstrasse 9
A-5020 Salzburg

T: +43 (0)662 216 026
F: +43 (0)662 216 026-66
E: austria@texim-europe.com

Nordic region



Sdr. Jagtvej 12
DK-2970 Hørsholm

T: +45 88 20 26 30
F: +45 88 20 26 39
E: nordic@texim-europe.com

Italy



Via Matteotti 43
IT-20864 Agrate Brianza (MB)

T: +39 (0)395 967 226
F: +39 (0)395 967 226
E: italy@texim-europe.com

General information



info@texim-europe.com
www.texim-europe.com