

XIM

www.texim-europe.com

Distributed by:


HDMI TFT Module Specification

MODEL: HA-101ZIEBCHDO-V



<>> PRELIMINARY SPECIFICATION

APPROVAL SPECIFICATION

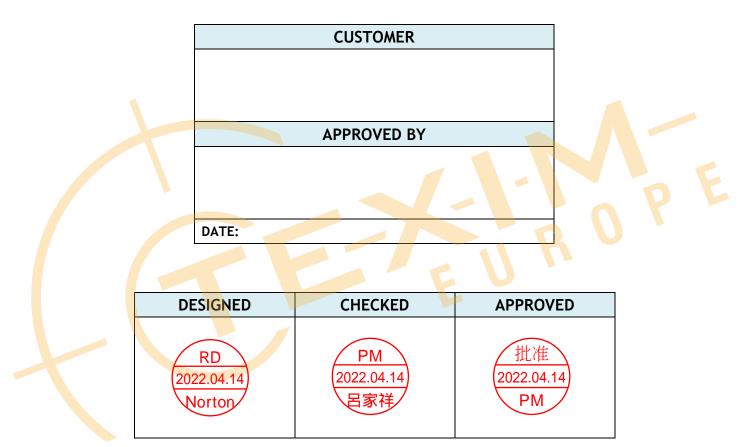

DigiWise International Corporation 3F., No. 10, Ln 83, Sec 1, Guang Fu Rd., Sanchong Dist., 24158, New Taipei City, Taiwan (ROC)

TEL: +886-2-29992866 FAX: +886-2-29990900



RECORD OF REVISION

Version	Revised Date	Page	Content
V1.0	2022/04/14		First Issued





TABLE OF CONTENTS

No.	Content	Page
HDMI	TFT Module Specification	1
TABL	E OF CONTENTS	3
1.	GENERAL DESCRIPTION	4
2.	MECHANICAL SPECIFICATION	5
3.	PIN DESCRIPTION	6
4.	ABSOLUTE MAXIMUM RATINGS	8
5.	BLOCK DIAGRAM	9
6.	ELECTRICAL CHARACTERISTICS	10
7.	PROJECTED CAPACITIVE TOUCH PANEL SPECIFICATION	10
8.	OPTICAL CHARACTERISTICS	11
9.	RELIABILITY	
10.	PRECAUTION RELATING PRODUCT HANDLING	



1. GENERAL DESCRIPTION

1.1 Description

HA-101ZIEBCHD0-V is a 10.1 (16:10) inch diagonally measured active display with high resolution WXGA 1280x800 display and high brightness. This model is composed of a TFT LCD panel, backlight system, a projected capacitive touch panel and HDMI interface. It is designed to make Raspberry Pi usage easy. You can simply use this TFT display with your Raspberry Pi, or also you can use this as computer display with any device which has HDMI output. This 10.1" TFT model comes in 1280x800 resolution that would be great for embedded computing usage too.

1.2 Features:


No.	ltem	Specification	Unit
1	Panel Size	10.1"	Inch
2	Number of Pixels	1280 (W) x RGB x 800 (H)	Pixels
3	Active Area	216.96 (W) × 135.6 (<mark>H)</mark>	mm
4	Pixel Pitch	0.1695 (W) x <mark>0.1</mark> 695 (H)	mm
5	Outline Dimension	257.96 (W) × 176.6 (H) × 25.78 (T)	mm
6	Number of Colors	16.7M	
7	Display Mode	IPS / Normally Black / Transmissive	
8	View Direction	Free direction	
9	Display <mark>Fo</mark> rmat	ay Format RGB vertical stripe	
10	Surface Tr <mark>eat</mark> ment	ce Tr <mark>eat</mark> ment Clear (7H)	
11	Contrast Ratio	900 (Тур.)	
12	Luminance (cd/m^2)	ance (cd/m^2) 600 (Typ.)	
13	Video Input Interface	HDMI	
15		(Compliance HDMI V1.4)	
14	Backlight	White LED	
15	Operation Temperature	-30 ~ 80	°C
16	Storage Temperature	-30 ~ 80	°C
17	Weight	(785)	g



www.digiwise.asia

E-mail: sales@digiwise.asia

2. MECHANICAL SPECIFICATION

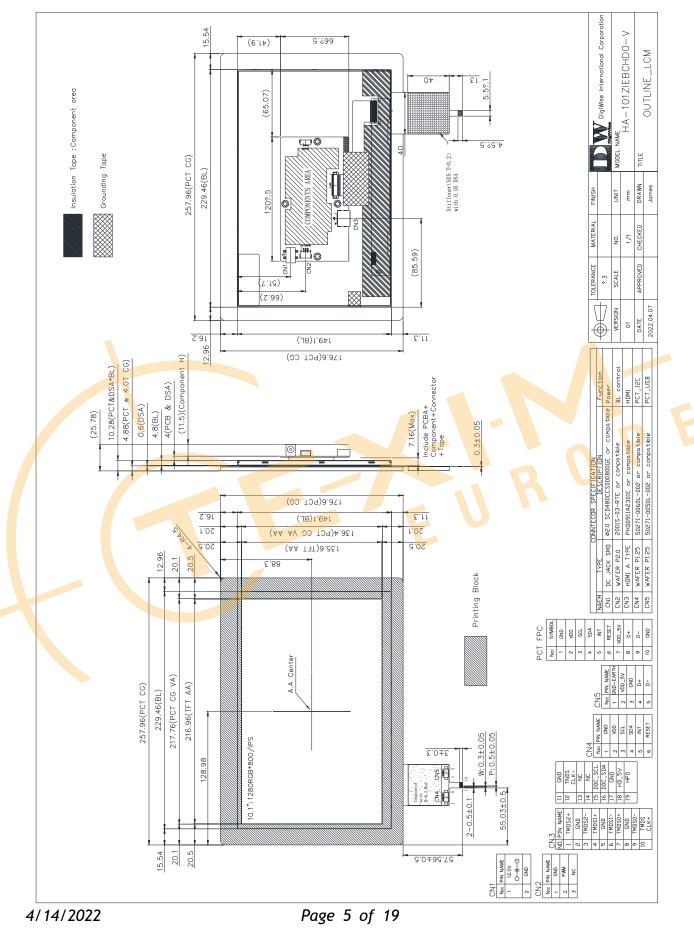

Distributed by www.texim-europe.com



E-mail: sales@digiwise.asia

3. PIN DESCRIPTION

3.1 Power Input(CN1)

[DC JACK:SCD480CCS000B00GE or compatible]

Pin No.	Symbol	1/0	Function	Note
1	12V	Ρ	Power Supply +12V	12.0V
2	GND	Ρ	Ground	

3.2 Back-light Control(CN2) [WAFER P2.0mm:2001S-03-RTE or compatible]

Pin No.	Symbol	1/0	Function	Note
1	GND	Р	Ground	
2	PWM	Ι	Back-light Dimming control (internal pull up to 3.3V)	*1
3	N.C.	-	N.C.	

*1: When PWM not connected, back-light defult is typical brightness.

3.3 HDMI (CN3) [HDMI A TYPE:PHD0911A2301E or compatible]				
Pin No.	Symbol	I/0	Function	Note
1	TMDS 2+	I	TMDS Data2+	
2	GND	Р	TMDS Data2 Shield	
3	TMDS 2-		TMDS Data2-	
4	TMDS 1+	Ι	TMDS Data1+	
5	GND	Р	TMDS Data1 Shield	
6	TMDS 1-	1	TMDS Data1-	
7	TMDS 0+	I	TMDS Data0+	
8	GND	Р	TMDS Data0 Shield	
9	TMDS 0-	- 1	TMDS Data0-	
10	TMDS CLK+	1	TMDS Clock+	
11	GND	Р	TMDS Clock Shield	
12	TMDS CLK-	Ι	TMDS Clock-	
13	N.C.	-	N.C.	
14	N.C.	-	N.C.	
15	DDC_SCL	I	IIC SCL to EDID ROM	
16	DDC_SDA	I/0	IIC SDA to EDID ROM	
17	GND	Р	DDC/CEC Ground	
18	HD_5V	Р	+5V Power	
19	HPD	0	Hot Plug Detect	



www.digiwise.asia

E-mail: sales@digiwise.asia

3 4 PCT Control·IIC (CNA)	[WAFER P1.25mm:50271-0060L-002 or compatible]

Pin No.	Symbol	1/0	Function	Note
1	GND	Р	Ground	
2	VDD	Р	Power supply for I2C	
3	SCL	I	IIC SCL to PCT Controller	
4	SDA	1/0	IIC SDA to PCT Controller	
5	INT	0	Interrupt	
6	RESET	I	Reset	

3.5 PCT Control:USB (CN5) [WAFER P1.25mm:50271-0050L-002 or compatible]

Pin No.	Symbol	1/0	Function	Note	
1	GND -EARTH	Р	Earth Ground(Shield)		
2	VDD_5V	Р	Power supply for USB I/F		
3	GND	Р	Power Ground		
4	D+	1/0	USB data +		
5	D-	1/0	USB data -		

3.6 PCT Control: IIC and USB (FPC)

Pin No.	Symbol	1/0	Function	Note			
1	GND	Р	Ground				
2	VDD	Р	Power supply for I2C				
3	SCL		IIC SCL to PCT Controller				
4	SDA	1/0	IC SDA to PCT Controller				
5	INT	0	nterrupt signal to inform the host processor that touch data is ready for read				
6	RESET	I	xternal low signal reset the chip.				
7	VDD_5V	Р	Power supply for USB I/F				
8	D+	1/0	USB data +				
9	D-	1/0	USB data -				
10	GND	Р	Ground				



E-mail: sales@digiwise.asia

4. ABSOLUTE MAXIMUM RATINGS

4.1 Electrical Absolute Rating

4.1.1 HDMI TFT LCD Module

ltom	Symbol	Val	ues	Unit	Note	
ltem	Symbol	Min	Max.	Unit	Note	
Power supply voltage	12V	10	14	V		


4.1.2 Environment Absolute Rating

ltom	Symbol		Values	Unit	Note	
ltem	Symbol	Min	Тур	Max.	Unit	Note
Operating Temperature	Тор	-30	-	80	°C	Ambient
Storage Temperature	Tst	-30	-	80	°C	temperature



www.digiwise.asia E-mail: sales@digiwise.asia

- 5. BLOCK DIAGRAM
 - 5.1 TFT LCD Module

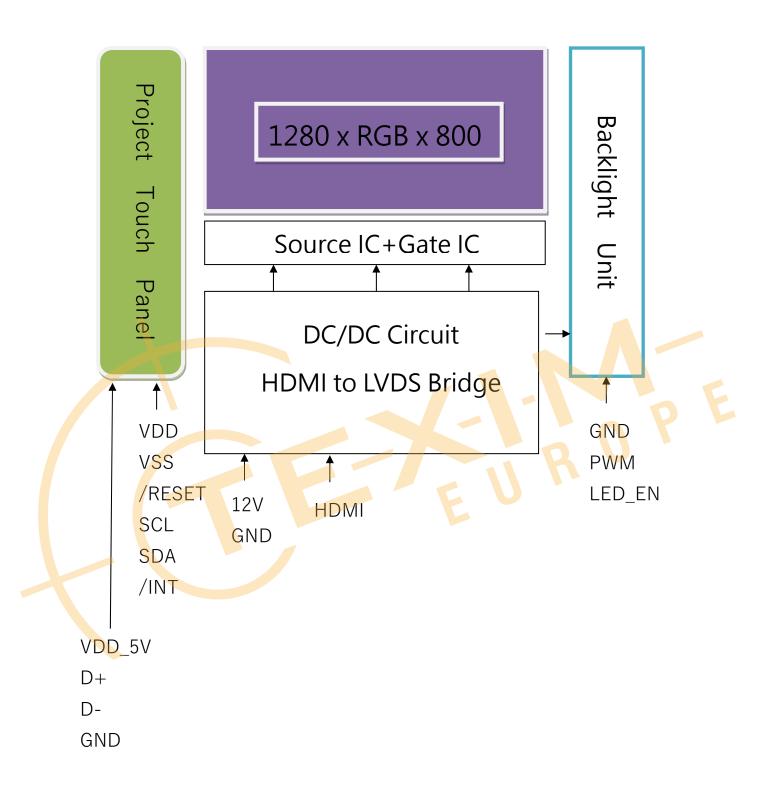



E-mail: sales@digiwise.asia

6. ELECTRICAL CHARACTERISTICS

6.1 HDMI TFT LCD Module

ltem	Symbol		Values	Unit	Note	
item	Symbol	Min	Тур.	Max.	Unit	note
Supply Voltage	12V	11	12	13	V	
PWM frequency		100	-	10K	Hz	
PWM Duty		17	-	100	%	<17%=0FF
PWM Dimming	Vpwm-ih	3.3	-	8	۷	
Voltage	VPWM-IL	-	0.3	-	۷	
LED Enable Control	VLED_EN-IH	3.3	-	12	۷	
Voltage	VLED_EN-IL	-	-	0.5	۷	
Supply Current	ICC(12V)	-	570	620	mA	
LED life time		50000	-	-	Hr	(1)

Note 1:

The "LED life time" is defined as the module brightness decrease to 50% original brightness that the ambient temperature is 25° C 60% RH.

7. POROJECTED CAPACITIVE TOUCH PANEL SPECIFICATION

7.1 Main Feature

Item	Specification	Unit
Screen Size	10.1 in <mark>che</mark> s	Diagonal
Туре	Transparent Type Projected Capacitive Touch Panel	
Input Mode	Human's Finger	
Interface	I2C or USB	
Touch number	5 points	
Cover glass pencil-hardness	7H	
Response time	≤25ms	ms
Controller IC	ILI2511	



www.digiwise.asia


E-mail: sales@digiwise.asia

8. OPTICAL CHARACTERISTICS

ltem		Symbol	Condition	Min.	Тур.	Max.	Unit
Bright	Brightness			480	600		cd/m2
Unifor	mity	B-uni	Note1,	75	80	-	%
Contrast	Ratio	CR	Note 3,	700	900		
NTSC			$(\theta = 0^\circ,$ Normal Viewing		73		%
Response Time		Tr + Tf			25	35	ms
Color	White	Wx	Angle)	0.275	0.315	0.355	
Chromaticity	white	Wy		0.310	0.350	0.390	
	Horizontal	heta x+		70	80		
View angle	ΠΟΠΖΟΠΙΔΙ	θ x-	Center	70	80		
	Vertical	θ Y +	CR≥10	70	80		
		θ Υ-		70	80		

Note : The following optical specifications shall be measured in a darkroom or equivalent state(ambient luminance ≤ 1 lux, and at room temperature). The operation temperature is 25°C±2°C. The measurement method is shown in Note1.

Note1: The method of optical measurement:

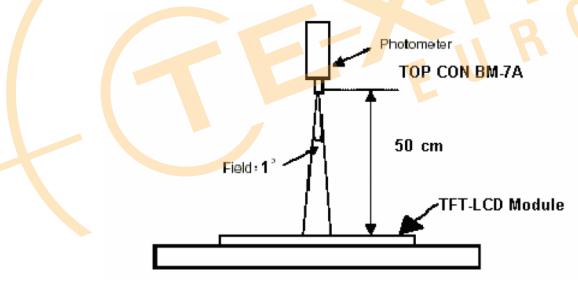

Note2: Measured at the center area of the panel and at the viewing angle of the $\theta x = \theta y$ =0°

Note3: Definition of Contrast Ratio (CR):


CR = Luminance with all pixels in white state \div Luminance with all pixels in Black state





www.digiwise.asia

E-mail: sales@digiwise.asia

Note 4: Definition of Viewing Angle:

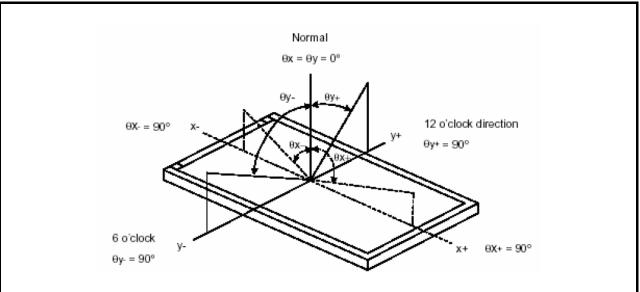

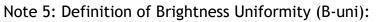

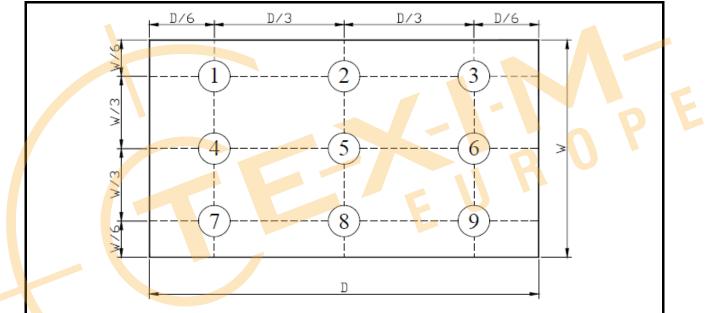


B-uni = (Minimum luminance of 9 points \div Maximum luminance of 9 points)X100%



www.digiwise.asia E-mail: sales@digiwise.asia

Note 6: Definition of Response Time:

The Response Time is set initially by defining the "Rising Time (Tr)" and the "Falling Time (Tf)" respectively. Tr and Tf are defined as following figure

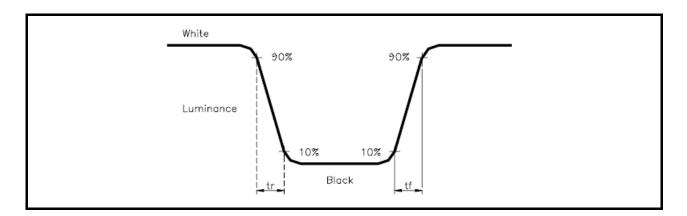

Note 7: Definition of Chromaticity:

The color coordinates (Wx,Wy),(Rx,Ry),(Gx,Gy),and (Bx,By) are obtained with all pixels in the viewing field at white, red, green, and blue states, respectively.





9. RELIABILITY

9.1 Test Condition

9.1.1 Temperature and Humidity(Ambient Temperature) Temperature : $25 \pm 5^{\circ}$ C Humidity : $65 \pm 5^{\circ}$

9.1.2 OperationUnless specified otherwise, test will be conducted under function state.

9.1.3 ContainerUnless specified otherwise, vibration test will be conducted to the product itself without putting it in a container.

9.1.4 Test Frequency

In case of related to deterioration such as shock test. It will be conducted only once.

9.2 TESTS

No.	ITEM	CONDITION CRITERION
1	High Temperature Storage 💦 🦷	80°C, 120 hrs
2	Low Temperature Storage	-30°C, 120 hrs
3	High Temperature Operating	80°C, 120 hrs
4	Low Temperature Operating	-30°C, 120 hrs
5	High Temperature/Humidity Non-Operating	40°C, 90%RH, 120 hrs
6	Temperature Shock Non-Operating	$-30^{\circ}C \leftrightarrow 80^{\circ}C$ (0.5hr each), 100 cycles
7	Vibration Test Non-Operating	Frequency:0 ~ 55 Hz Amplitude:1.5 mm Sweep Time:11min Test Period:6 Cycles for each Direction of X,Y,Z
8	Electro-static Discharge	\pm 2KV, Human Body Mode, 100pF/1500 Ω

Note1: The test sample have recovery time for 24 hours at room temperature before the function check. In the standard conditions, there is no any touch panel function NG issue occurred.



www.digiwise.asia E-mail: sales@digiwise.asia

9.3 JUDGMENT STANDARD

The judgment of the above test should be made as follow:

- Pass: Normal display image with no obvious non-uniformity and no line defect. Partial transformation of the module parts should be ignored.
- Fail: No display image, obvious non-uniformity, or line defects.





www.digiwise.asia

E-mail: sales@digiwise.asia

9.4 INCOMING INSPECTION STANDARDS

No.	Parameter		Criteria				
		Display function: No D	Display malfur	nction (Maj	or)		
		Contrast ratio (Black,	White):				
		Does not meet specified range in the spec. (Major) (Note:3)					
		Line Defect: No obvious Vertical and Horizontal line defect in bright,					
		dark and colored. (Major) (Note:1)					
		Point Defect : Active area ≤ 5 dots (Minor) (Note:1)					
			Acceptable r			Т	
		Item			Total		
			Active A	rea			
		Bright	2		-		
		Dark	4		5		
			-				
1	Operating						
		Non-uniformity: Visibl					
		Foreign material in B	lack or White	spots shap	<u>be (W>1/4</u>	IL)	
		Zone	Assesses	Class			
			7.00000100	Of		QL	
		Dimension	number	Defect	s L	evel	
		D> 0.5	0				
		0.3 < D ≤ 0.5	5	Minor		1.5	
		D ≤ 0.3	*			1.0	
				Dianamana			
		D = (Long + St		Disregard			
		Foreign Material in L		nape (vv≤1		e: 4)	
			Zone Ac	ceptable	Class	AQL	
				umbor	Of	Level	
		L (mm) W(mr			Defects		
			V>0.1	0			
			< W≤0.1	5	Minor	1.5	
			/≤0.03				
				Disregard			
		Dimension: Outline (
		Bezel appearance: u)			
		Scratch on the polar					
			Zone Accepta	Class	S	AQL	
			ble	Of Defe	ects	Level	
		L (mm) W(mm	number				
		W>0	0.1 0	Mino	r	1.5	
		L ≤ 3 W≤0		1			
			0	L			
	External Increation	L:Length W:	Width *: Di	ierogerd			
2	External Inspection			-			
2	(non-operating)	Dent or bubble on the Zone		Class		1	
		Zone	Acceptable	Of	AQL		
		Dimension	number	Defects	Level		
				Delects		-	
			*	Minor	1.5	1	
		D≤0.3	^		1.0		
		D≤0.3 D≤0.5	3	IVIIIIOI	1.0		
		D≤0.5					
				* : Disre			
		D≤0.5					

4/14/2022



www.digiwise.asia E-mail: sales@digiwise.asia

			Definition
Class of Major defects	Major		It is a defect that is likely to result in failure or to reduce materially the usability of the product for the intended function.
defects	Minor	AQL 1.5%	It is a defect that will not result in functioning problem with deviation classified.

Note1:

(a)Bright point defect is defined as point defect of R,G,B with area >1/2 pixel respectively (b)Dark point defect is defined as visible in full white pattern.

(c)Definition of distribution of point defect is as follows:

-minimum separation between dark point defects should be larger than 5mm.

-minimum separation between bright point defects should be larger than 5mm.

(d)Definition of joined bright point defect and joined dark point defect are as follows:

-Two or more joined bright point defects must be nil.


-Three joined dark point defects must be nil.

- -Coupling of one dark and one bright point in junction is counted as one dark and bright spot with 1 pair maximum.
- -Two Joined dark point is counted as two dark points with 2 pair maximum.

Note2: The external inspection should be conducted at the distance 30± 5cm between the eyes of inspector and the panel.

Note3: Luminance measurement for contrast ratio is at the distance $50\pm$ 5cm between the detective head and the panel with ambient luminance less than 1 lux. Contrast ratio is obtained at optimum view angle.

Note4: W-Width in mm, L-length of Max.(L1,L2) in mm.

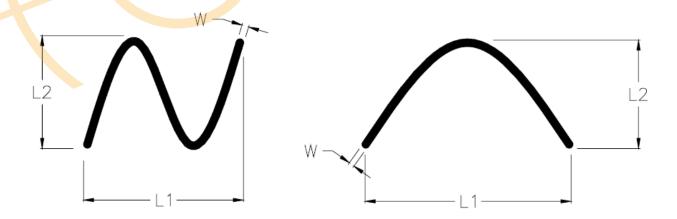



9.5 Sampling Condition

Unless otherwise agree in written, the sampling inspection shall be applied to the incoming inspection of customer.

Lot size: Quantity of shipment lot per model.

Sampling type: normal inspection, single sampling

Sampling table: MIL-STD-105E


Inspection level: Level II

9.6 Inspection conditions

The LCD shall be inspected under 40W white fluorescent light.

 $\theta \leq 45^{\circ}$ inspection under non-operating condition.

 $\theta \! \leq \! \mathbf{5}^{\circ}$ inspection under operating condition

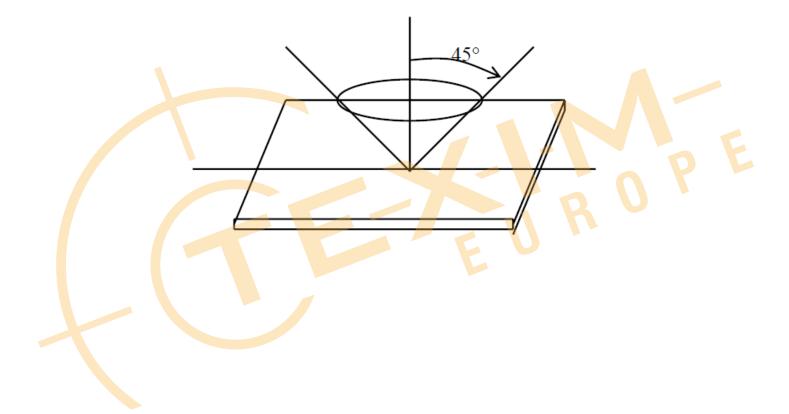



10. PRECAUTION RELATING PRODUCT HANDLING

- 10.1 SAFETY
- 10.1.1 If the LCD panel breaks , be careful not to get the liquid crystal to touch your skin.
- 10.1.2 If the liquid crystal touches your skin or clothes , please wash it off immediately by using soap and water.
- 10.2 HANDLING
- 10.2.1 Avoid any strong mechanical shock which can break the glass.
- 10.2.2 Avoid static electricity which can damage the CMOS LSI—When working with the module, be sure to ground your body and any electrical equipment you may be using.
- 10.2.3 Do not remove the panel or frame from the module.
- 10.2.4 The polarizing plate of the display is very fragile. So , please handle it very carefully, Do not touch, push or rub the exposed polarizing with anything harder than an HB pencil lead (glass , tweezers , etc.)
- 10.2.5 Do not wipe the polarizing plate with a dry cloth, as it may easily scratch the surface of plate.
- 10.2.6 Do not touch the display area with bare hands , this will stain the display area.
- 10.2.7 Do not use ketonics solvent & aromatic solvent. Use with a soft cloth soaked with a cleaning naphtha solvent.
- 10.2.8 To control temperature and time of soldering is $280 \pm 10^{\circ}$ C and 3-5 sec.
- 10.2.9 To avoid liquid (include organic solvent) stained on LCM.
- 10.3 STORAGE
- 10.3.1 Store the panel or module in a dark place where the temperature is 25°C ± 5°C and the humidity is below 65% RH.
- 10.3.2 Do not place the module near organics solvents or corrosive gases.
- 10.3.3 Do not crush, shake, or jolt the module.

Disclaimer

ALL PRODUCTS, PRODUCT SPECIFICATIONS AND DATA ARE SUBJECT TO CHANGE WITHOUT NOTICE TO IMPROVE RELIABILITY, FUNCTION OR DESIGN OR OTHERWISE.

Texim Europe B.V. its affiliates, agents, and employees, and all persons acting on its or their behalf (collectively, "Texim"), disclaim any and all liability for any errors, inaccuracies or incompleteness contained in any datasheet or in any other disclosure relating to any product.

Texim makes no warranty, representation or guarantee regarding the suitability of the products for any particular purpose or the continuing production of any product.

It is the customer's responsibility to validate that a particular product with the properties described in the product specification is suitable for use in a particular application.

Parameters provided in datasheets and / or specifications may vary in different applications and performance may vary over time.

All operating parameters, including typical parameters, must be validated for each customer application by the customer's technical experts.

Please contact us if you have any questions about the contents of the datasheet.

This may not be the latest version of the datasheet. Please check with us if a later version is available.





Headquarters & Warehouse

Elektrostraat 17 NL-7483 PG Haaksbergen The Netherlands

T:	+31 (0)53 573 33 33
E:	info@texim-europe.com
Homepage:	www.texim-europe.com





The Netherlands

Elektrostraat 17 NL-7483 PG Haaksbergen

T: +31 (0)53 573 33 33 E: nl@texim-europe.com



Belgium

Zuiderlaan 14, box 10 B-1731 Zellik

T: +32 (0)2 462 01 00 E: belgium@texim-europe.com



UK & Ireland

St Mary's House, Church Lane Carlton Le Moorland Lincoln LN5 9HS

T: +44 (0)1522 789 555 E: uk@texim-europe.com



Germany Bahnhofstrasse 92

D-25451 Quickborn

T: +49 (0)4106 627 07-0 E: germany@texim-europe.com



Germany

Martin-Kollar-Strasse 9 D-81829 München

T: +49 (0)89 436 086-0 E: muenchen@texim-europe.com



Austria Warwitzstrasse 9 A-5020 Salzburg

T: +43 (0)662 216 026 E: austria@texim-europe.com



Nordic Stockholmsgade 45 2100 Copenhagen

T: +45 88 20 26 30 E: nordic@texim-europe.com



Martin-Kollar-Strasse 9 D-81829 München

T: +49 (0)89 436 086-0 E: italy@texim-europe.com

www.texim-europe.com